


2021-24/DODGE TRX

DITCH LIGHT MOUNTS

AC6201801NA

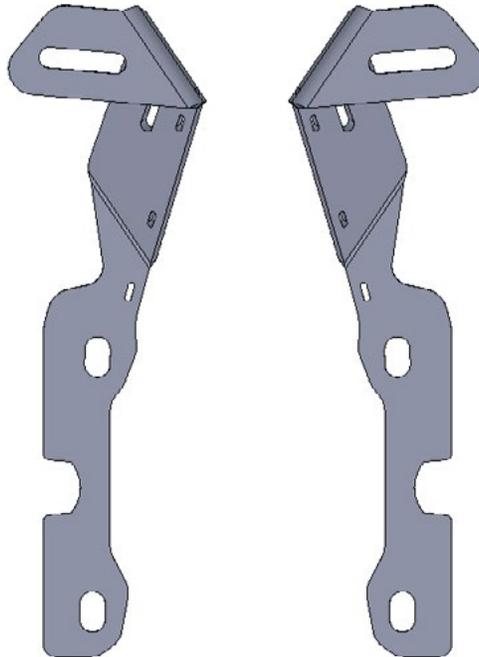

TOOLS REQUIRED

(Wrench) 3/8, 1/2

(Socket) 3/8, 1/2

Philips head screwdriver

Ratchet



TIME REQUIRED

- 30 Minutes for OEM Removal/Bracket Install

-1 Additional Hour to Wire Lights

****Labor Rates are based on a vehicle with no pre-existing damage. Wiring labor is based on a standard wiring procedure with light switches installed in an easily accessible location. Custom light triggering or switch mounting location will result in a greater labor charge.****



SKILL LEVEL

-Easy/Intermediate



INCLUDED IN KIT

(2) 10-32 Nylon Lock Nut

(2) M5 Washer

(2) Threaded Stud Bumper

⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service (480) 671-0820

Addictive desert designs is *not* responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS

HARDWARE/PARTS

A.



10-32 NYLON LOCK NUT

QTY: 2


A1.



M5 WASHER

QTY: 2

A2.

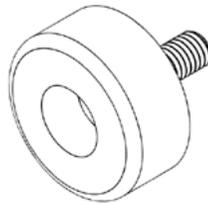

THREADED STUD BUMPER

QTY: 2


Reference this page throughout the install

DITCH LIGHT MOUNTS 2021-24/DODGE TRX

INSTALL

□ STEP 1

Install (A, A1, A2) rubber bump stops into the slotted holes as shown below.

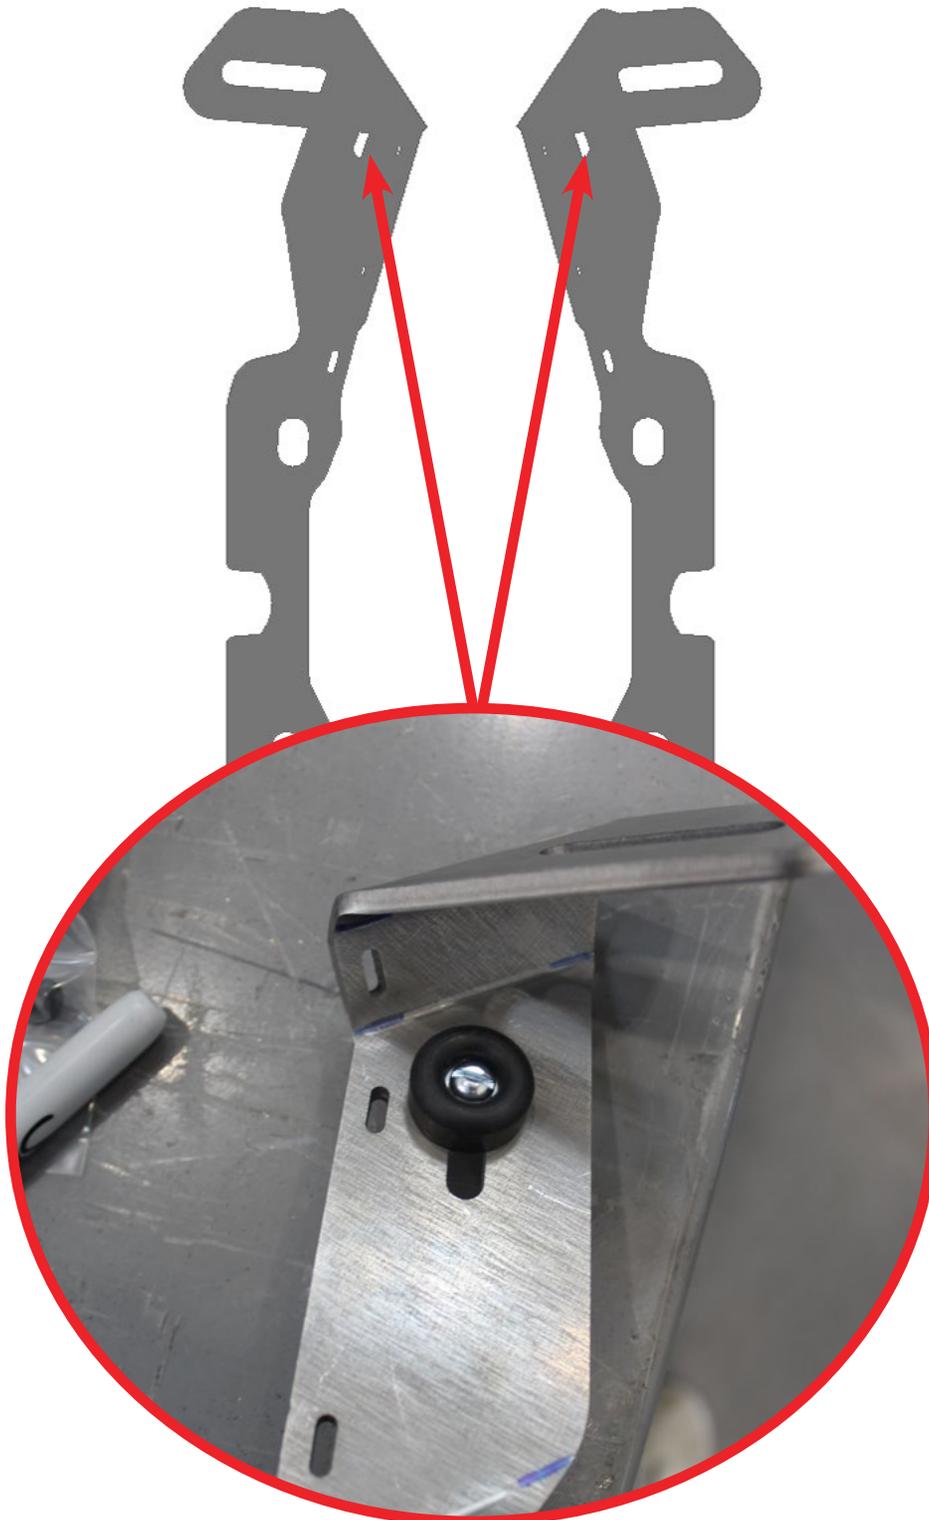

DITCH LIGHT MOUNTS 2021-24/DODGE TRX

REMOVAL

□ STEP 2

Locate the hood brackets and mark the outline of the bracket with a marker as shown below.



DITCH LIGHT MOUNTS 2021-24/DODGE TRX

REMOVAL

STEP 3

Using a (1/2 socket) remove the hook bracket nuts. (Keep hardware for install) ****Remove one side at a time****



DITCH LIGHT MOUNTS 2021-24/DODGE TRX

INSTALL

□ STEP 4

Install the ditch brackets as shown below using a (1/2" socket).



DITCH LIGHT MOUNTS 2021-24/DODGE TRX

INSTALL

STEP 5

When tightening, ensure that you have the bracket lined up with the marks you made on step 2.



DITCH LIGHT MOUNTS 2021-24/DODGE TRX

FINAL

STEP 6

Stand back and enjoy your new ADD Ditch Light Mounts.

Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS
WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,
PLEASE CALL 480-671-0820 OR
EMAIL INFO@ADDICTIVEDESERTDESIGNS.COM