



## 21+/FORD BRONCO DUAL DITCH LIGHT BRACKETS AC2301801NA

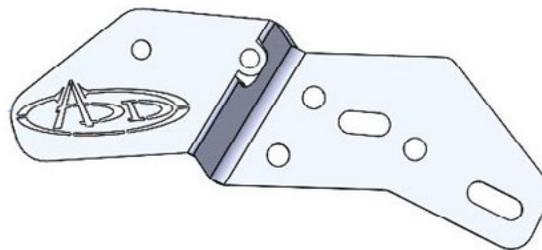

### TOOLS REQUIRED

(Torx) T25, T30  
Ratchet

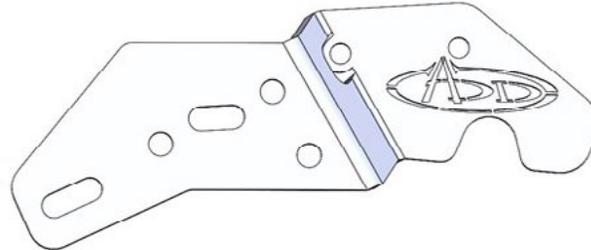

### TIME REQUIRED

- 30 minutes

-1 Additional Hour to Wire Cube Lights

**\*\*Labor Rates are based on a vehicle with no pre-existing damage. Wiring labor is based on a standard wiring procedure with light switches installed in an easily accessible location. Custom light triggering or switch mounting location will result in a greater labor charge.\*\***



### SKILL LEVEL

-Easy/Intermediate



### INCLUDED IN KIT

## **⚠ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠**

### **-BEFORE YOU INSTALL THIS KIT-**

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service (480) 671-0820

Addictive desert designs is *not* responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

**\*ALWAYS WEAR EYE PROTECTION  
WHEN OPERATING POWER TOOLS\***

## DUAL DITCH LIGHT BRACKETS 21+/FORD BRONCO

### □ STEP 1

Using a (T30) and a (T25) remove the stock accessory bolts.



## DUAL DITCH LIGHT BRACKETS 21+/FORD BRONCO

### □ STEP 2

Install the dual ditch light brackets with the stock accessory bolts in the same locations and install your lights after the bracket has been mounted.



## DUAL DITCH LIGHT BRACKETS 21+/FORD BRONCO

### □ STEP 3

Stand back and enjoy your new ADD Dual Ditch Light Brackets.

Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS  
[WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS](http://WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS)

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,  
PLEASE CALL 480-671-0820 OR  
EMAIL [INFO@ADDICTIVEDESERTDESIGNS.COM](mailto:INFO@ADDICTIVEDESERTDESIGNS.COM)