


## 23+ / FORD SUPER DUTY

### BED SIDE MOLLE PASSENGER

AC8103301NA

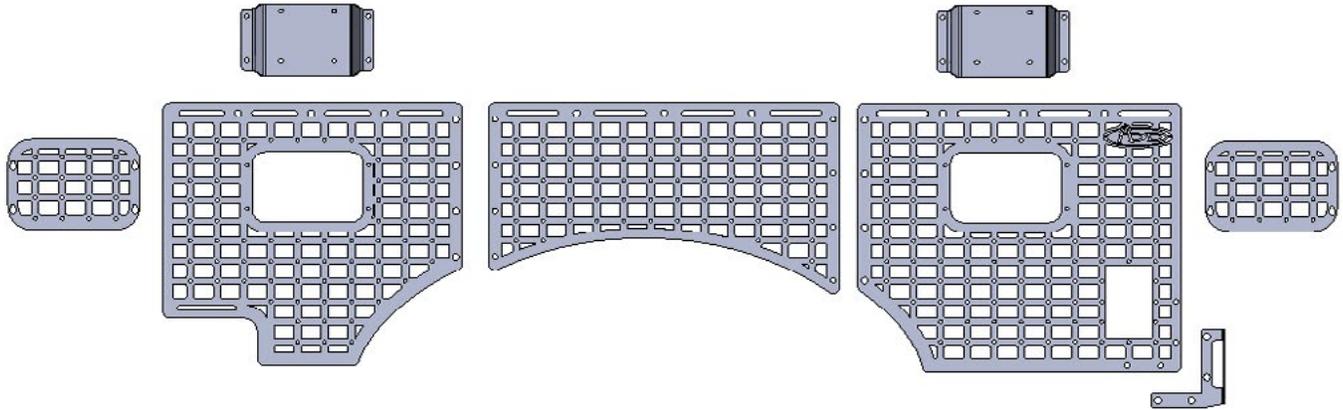

#### TOOLS REQUIRED

(Allen) 5/32, 7/32  
(Torx) T30  
Ratchet



#### TIME REQUIRED

- 1 hours for OEM Removal/Install



#### SKILL LEVEL

-Easy/Intermediate



#### INCLUDED IN KIT

12- 3/8-16 X 3/4" Button Head Bolt  
12- 3/8" Flat Washer  
8- 1/4-20 X 3/4" Button Head Bolt

## ⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

#### -BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service (480) 671-0820

Addictive desert designs is *not* responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

**\*ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS\***

## HARDWARE/PARTS

**A.**



3/8-16 X 3/4 BUTTON HEAD BOLT

QTY: 12

**A1.**



3/8" FLAT WASHER

QTY: 12

**B.**



1/4-20 X 3/4" BUTTON HEAD BOLT

QTY: 8


**Reference this page throughout the install**

## BED SIDE MOLLE PASSENGER 23+ / FORD SUPER DUTY

## REMOVAL

### □ STEP 1

Remove the tie down brackets using a (T30 torx).

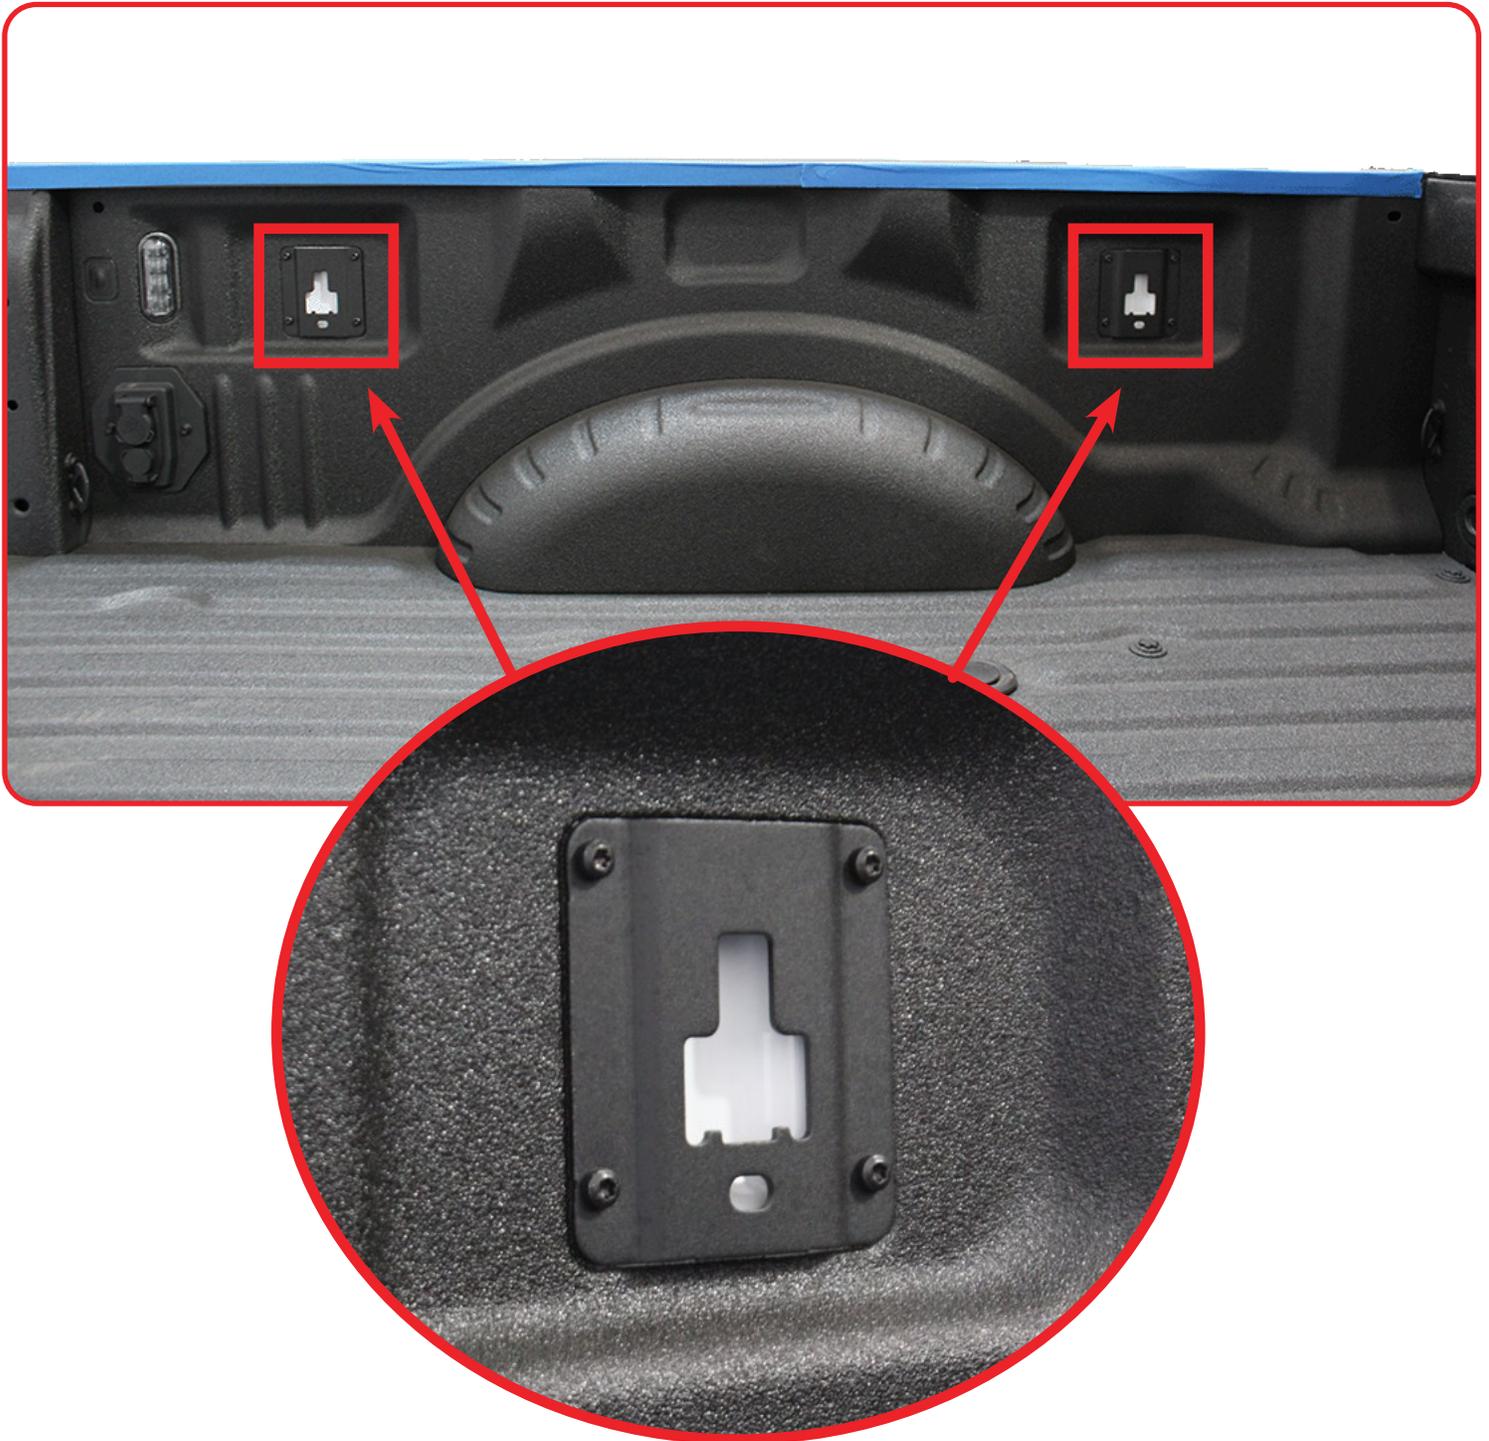

## BED SIDE MOLLE PASSENGER 23+ / FORD SUPER DUTY

## REMOVAL

### □ STEP 2

Remove the tie down located near the tailgate using a (T30 torx).





## BED SIDE MOLLE PASSENGER 23+ / FORD SUPER DUTY

## INSTALL

### □ STEP 3

Assemble the panels with the provided (A, A1) hardware using a (7/32 allen).

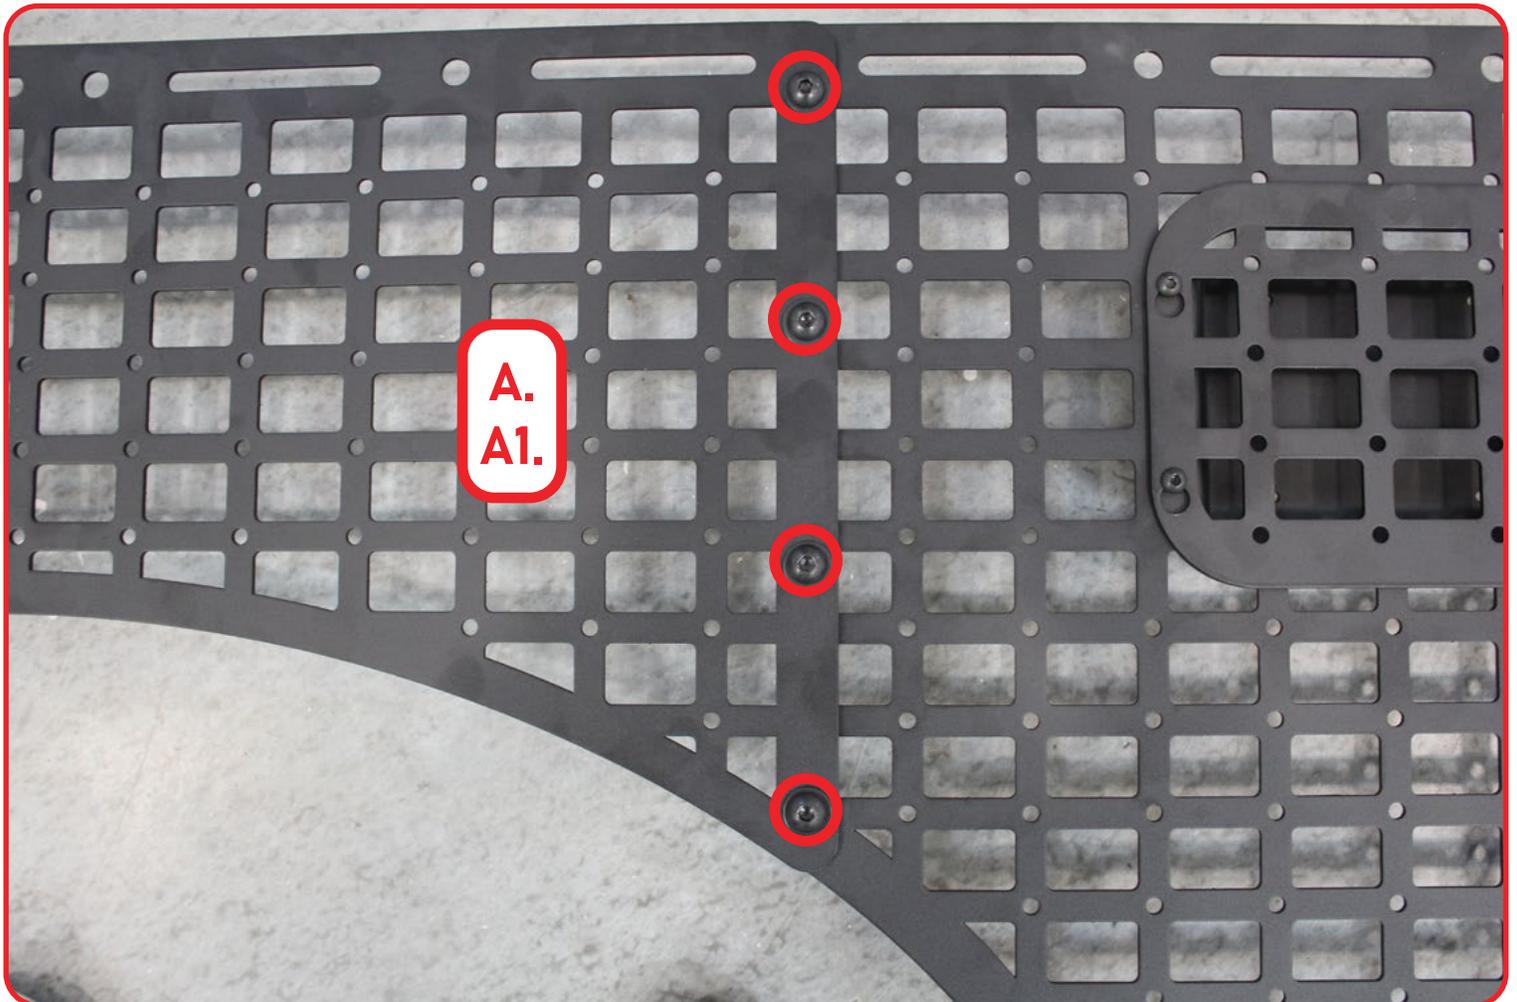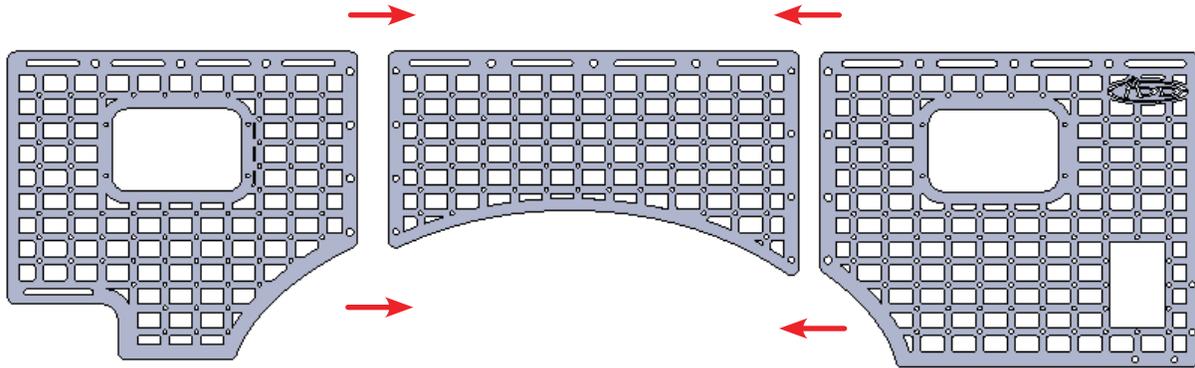



## BED SIDE MOLLE PASSENGER

23+/FORD SUPER DUTY

## INSTALL

### □ STEP 4

Install the bottom mouting bracket with the provided (A, A1) hardware using a (7/32 allen).

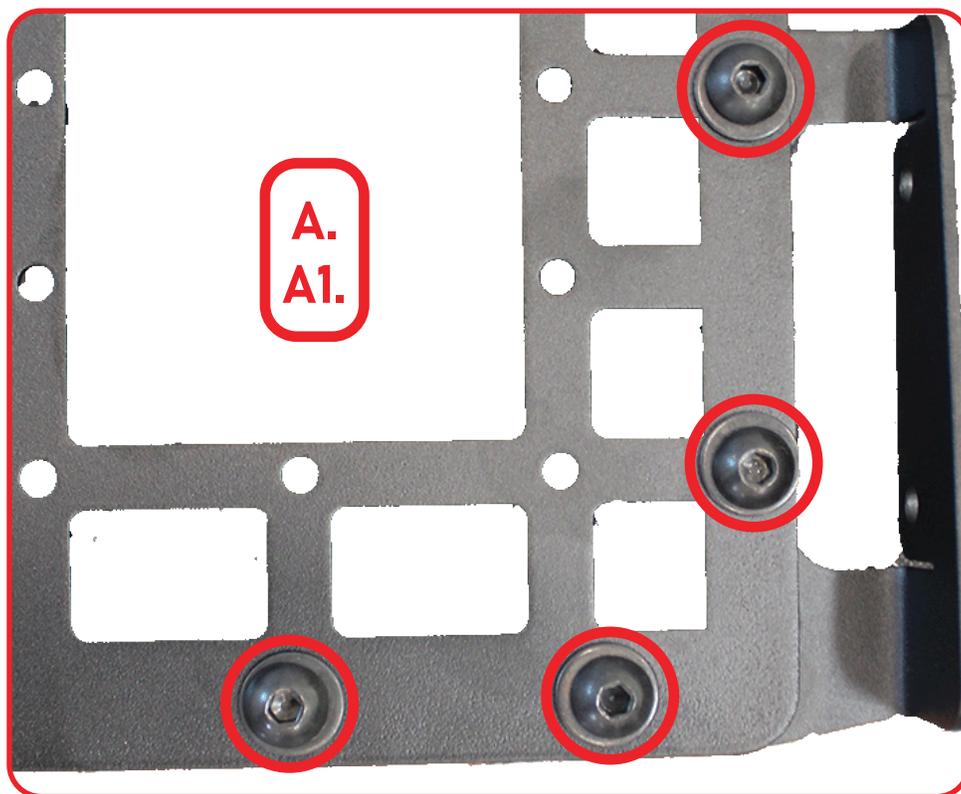
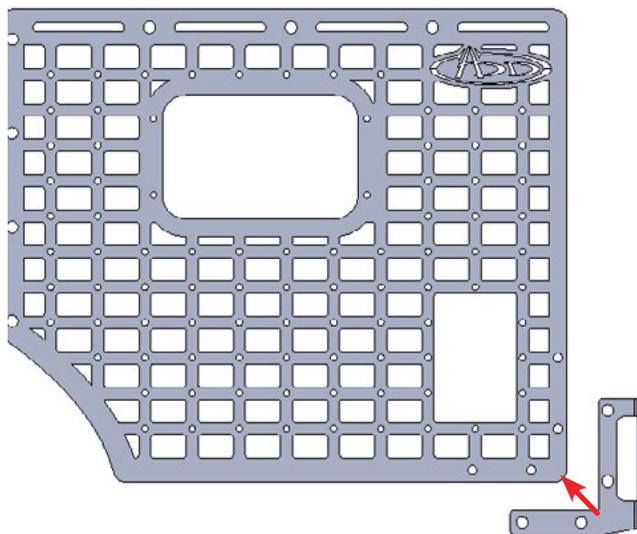


## BED SIDE MOLLE PASSENGER 23+ / FORD SUPER DUTY

## INSTALL

### □ STEP 5

Install the mounting brackets with the provided (B) hardware using a (5/32 allen). **\*\*Leave loose for install\*\***

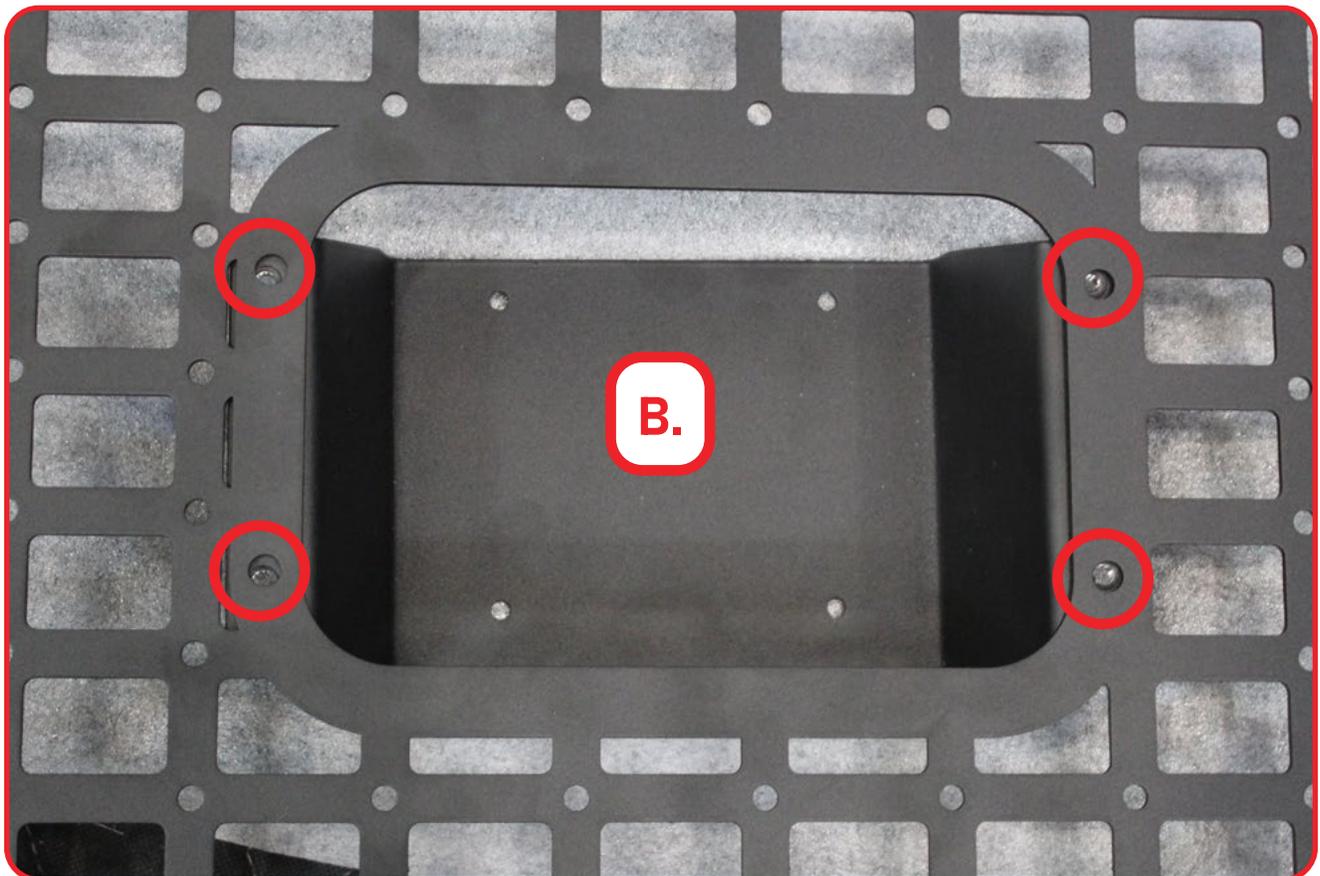
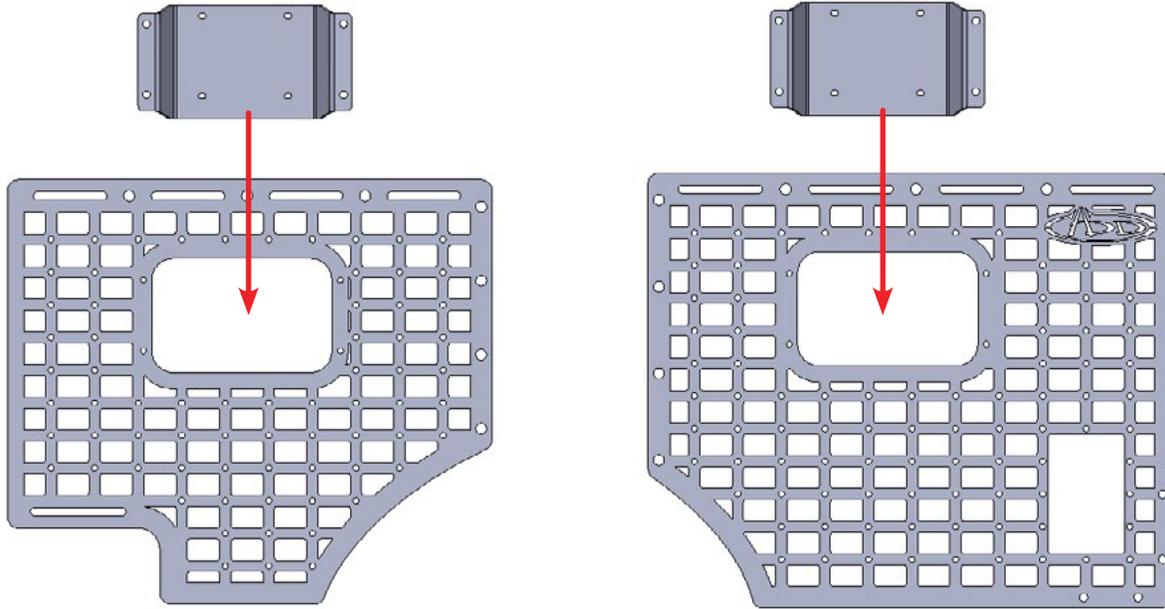


## BED SIDE MOLLE PASSENGER 23+/FORD SUPER DUTY

## INSTALL

### □ STEP 6

Ensure that the brackets are installed with the mounting holes in the orientation as shown below.

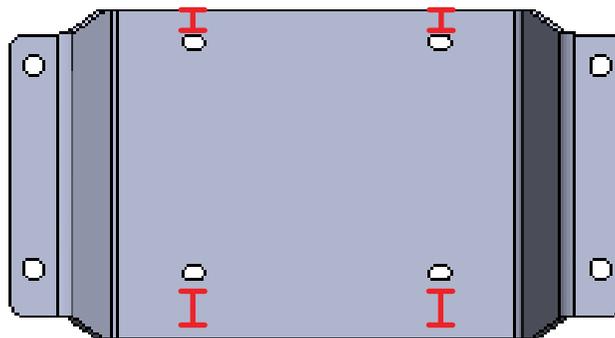
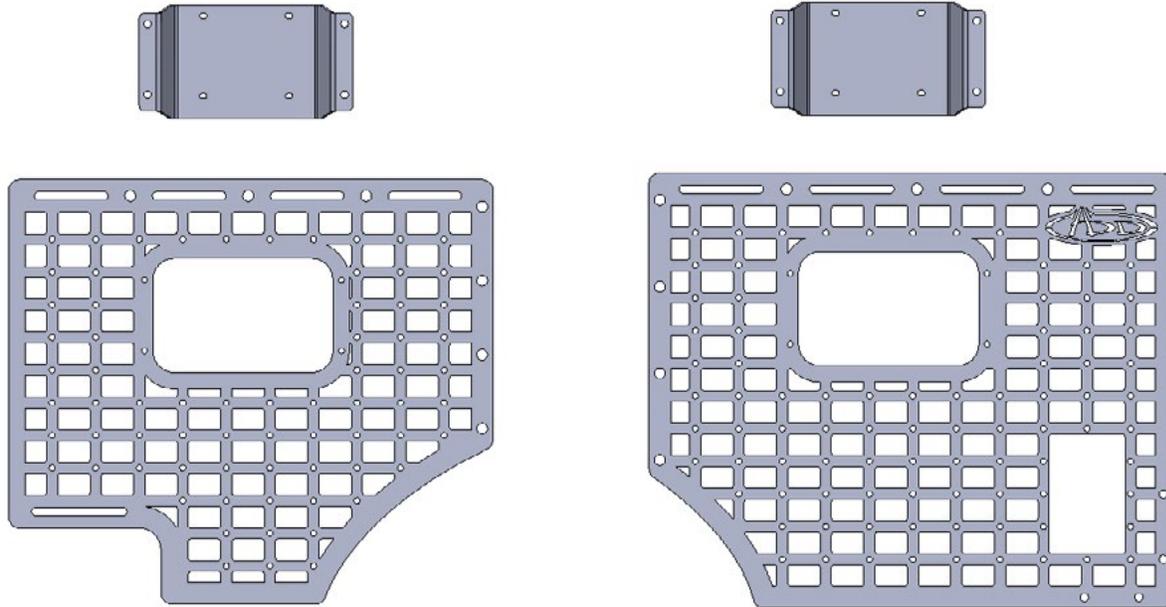


## BED SIDE MOLLE PASSENGER 23+ / FORD SUPER DUTY

## INSTALL

### □ STEP 7

Install the side molle into the bed with the brackets removed from **step 1** with the OEM hardware using a (T30 torx).

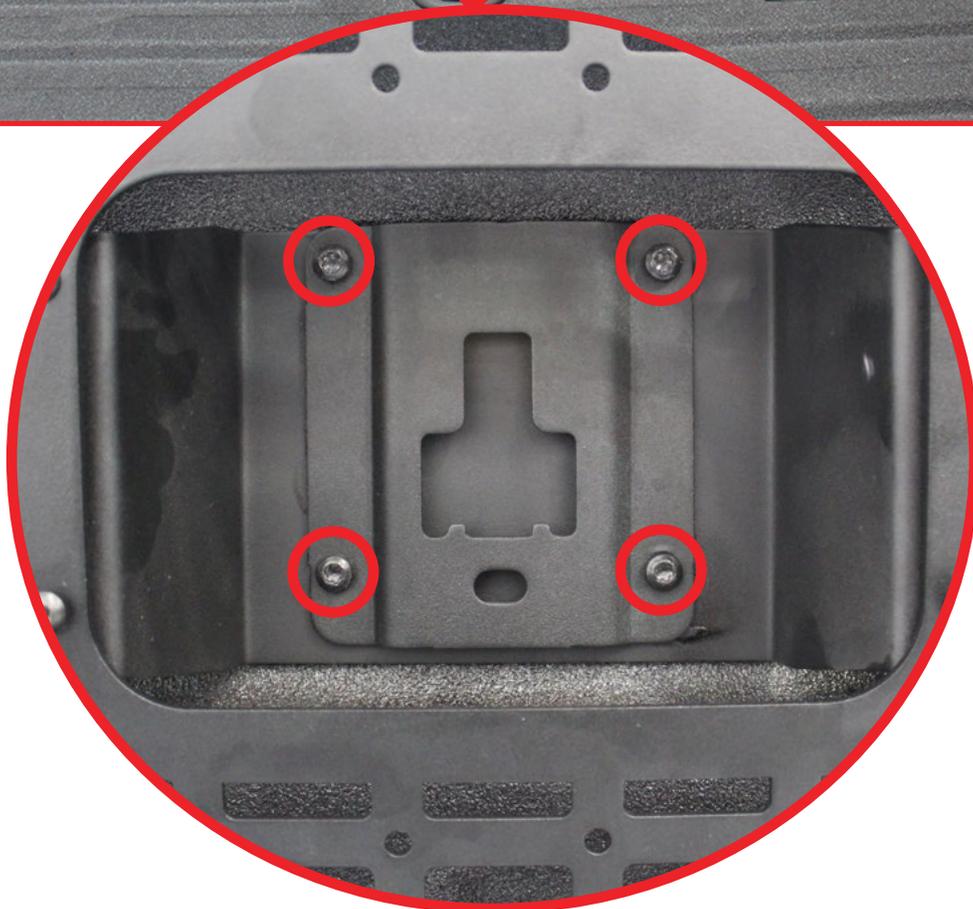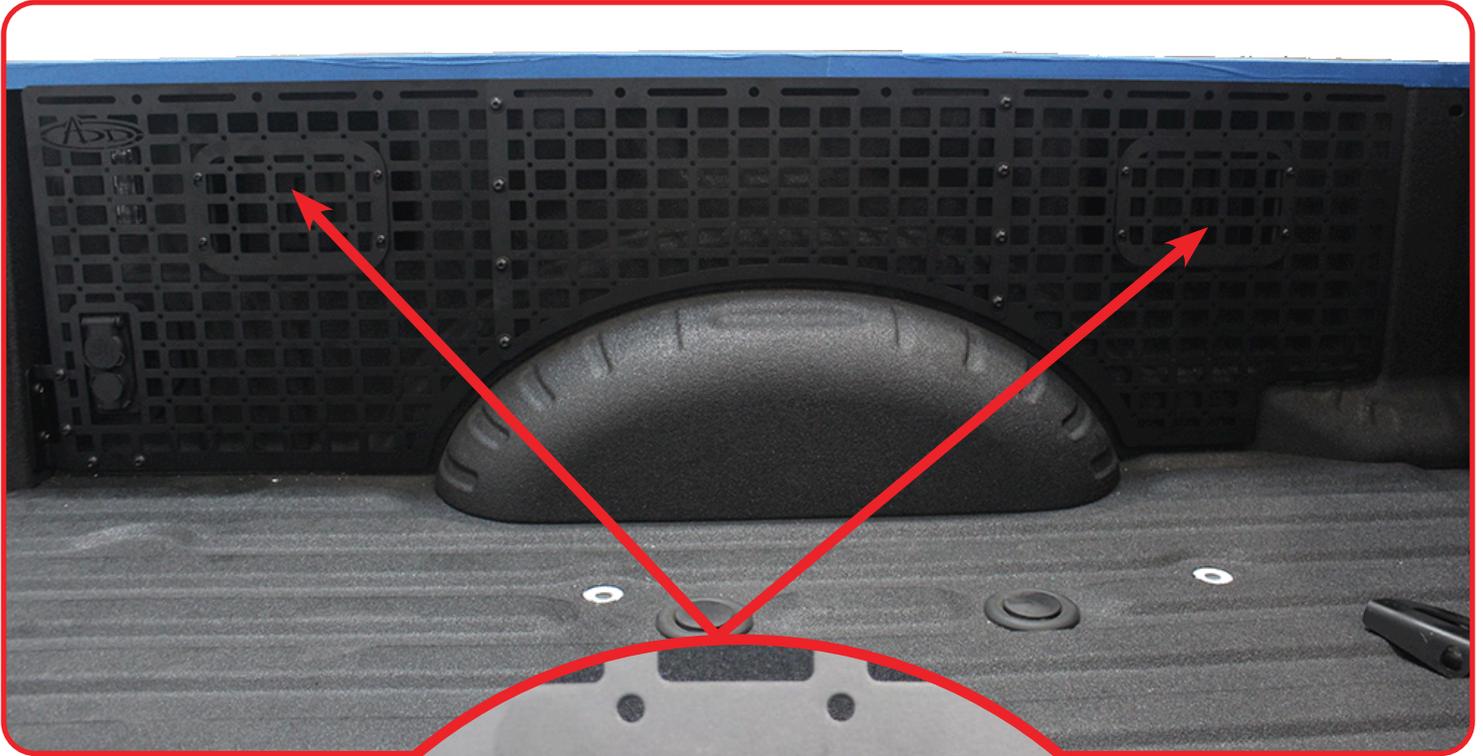


## BED SIDE MOLLE PASSENGER 23+ / FORD SUPER DUTY

## INSTALL

### □ STEP 8

Install the covers by inserting onto the loose hardware from **step 5** and tighten using a (5/32 allen).


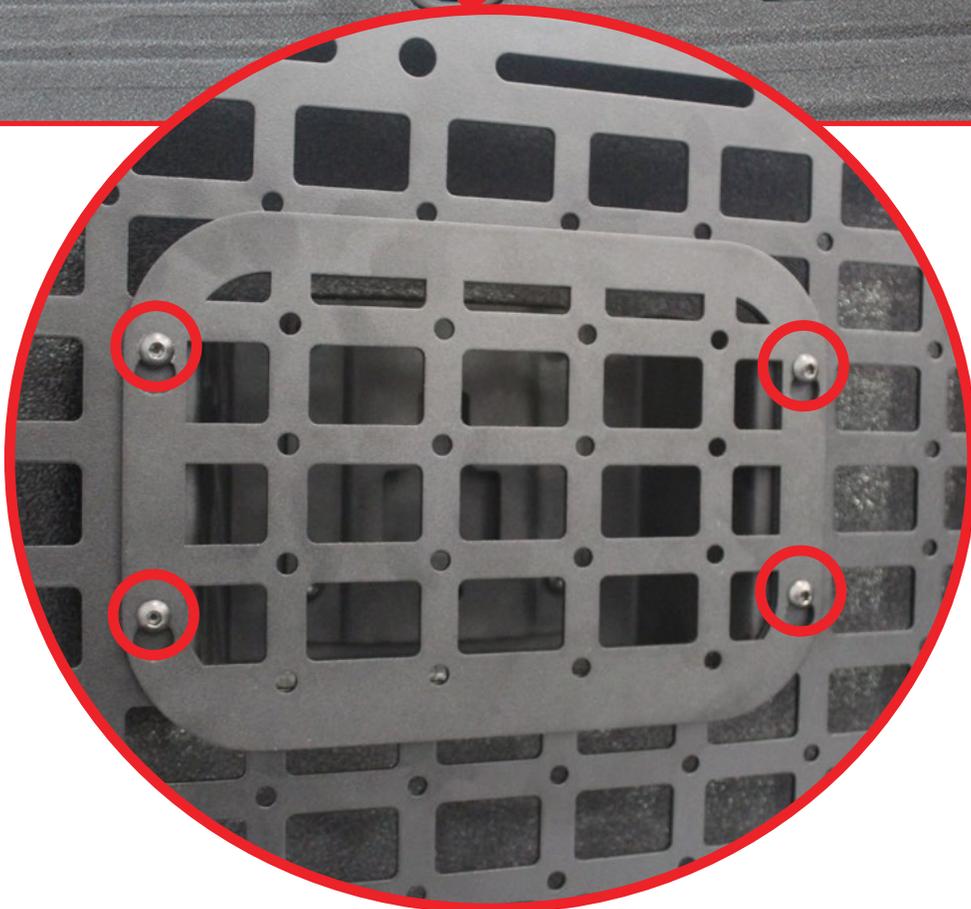


## BED SIDE MOLLE PASSENGER 23+ / FORD SUPER DUTY

## INSTALL

### □ STEP 9

Install the OEM hardware removed from **step 2** using a (T30 Torx).

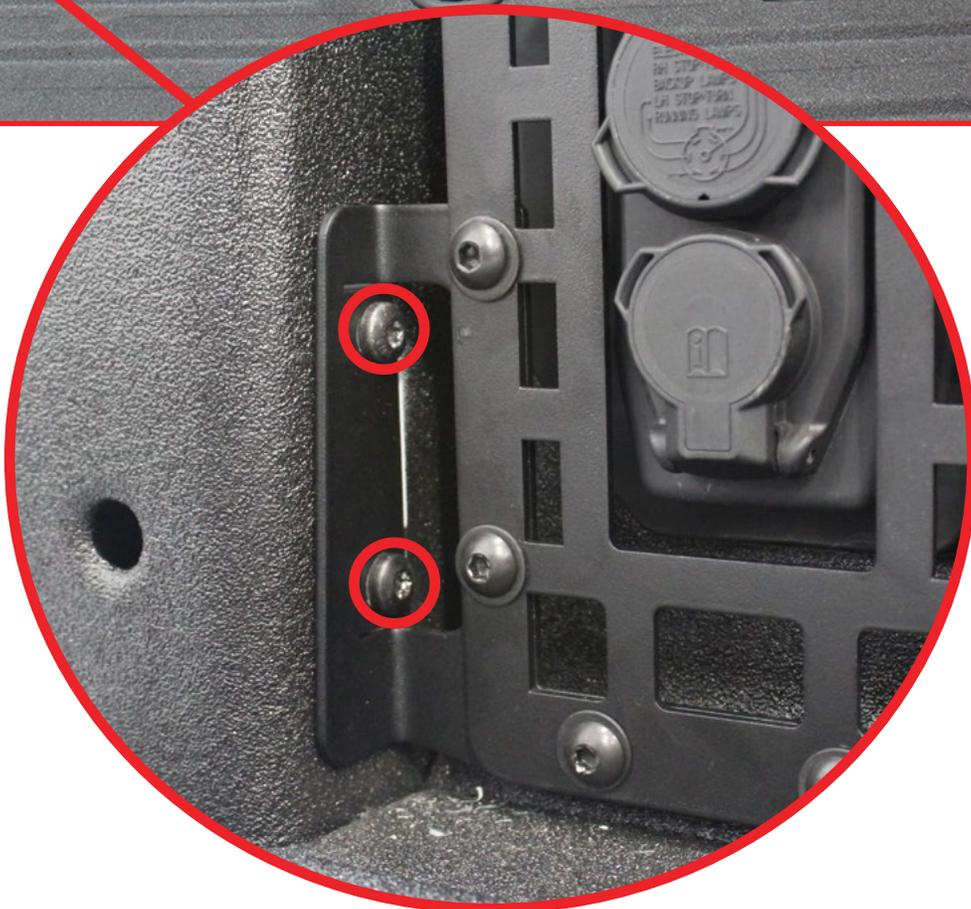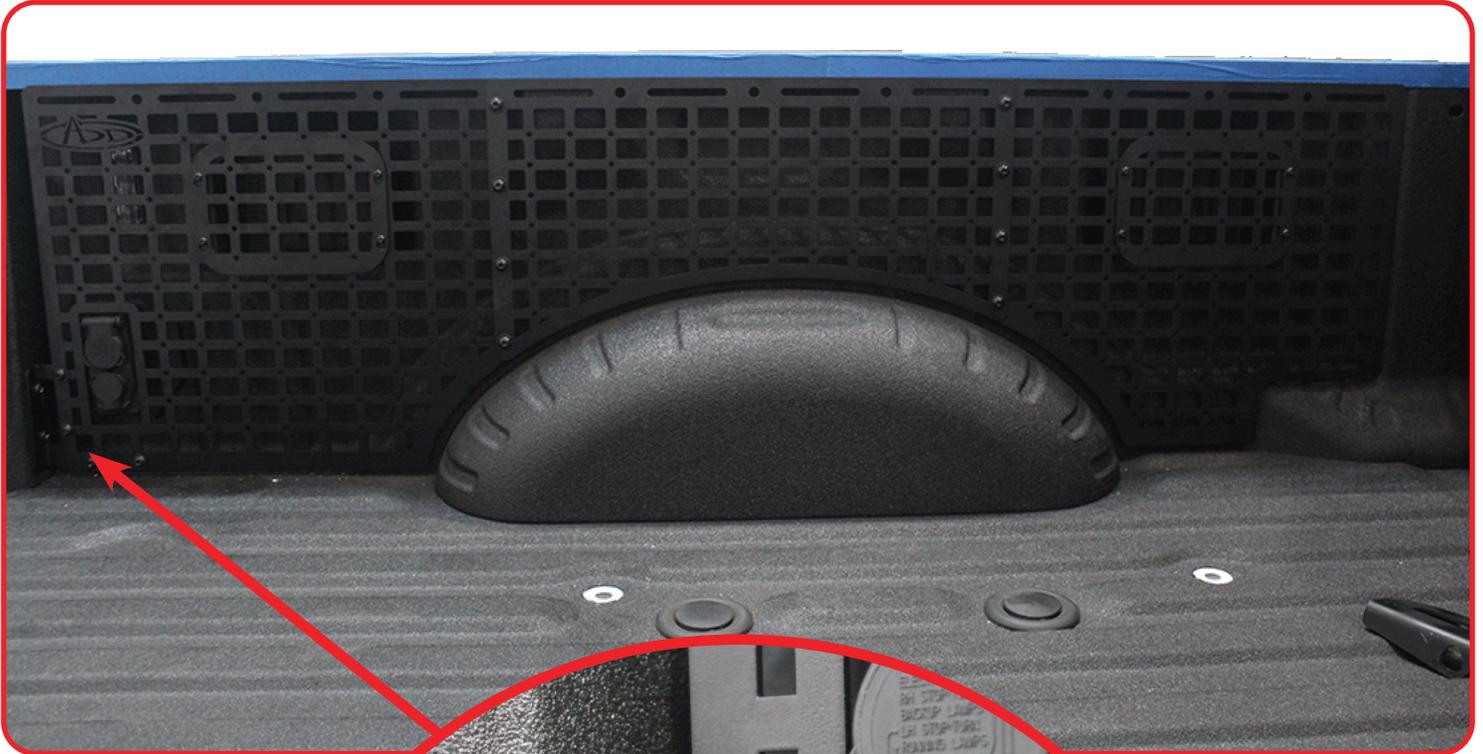

## BED SIDE MOLLE PASSENGER 23+ / FORD SUPER DUTY

## FINAL

### STEP 10

Stand back and enjoy your new ADD Bed Side Molle.

Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS  
[WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS](http://WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS)

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,  
PLEASE CALL 480-671-0820 OR  
EMAIL [INFO@ADDICTIVEDESERTDESIGNS.COM](mailto:INFO@ADDICTIVEDESERTDESIGNS.COM)