


23+ / FORD SUPER DUTY

DASH MOUNT

AC810350180

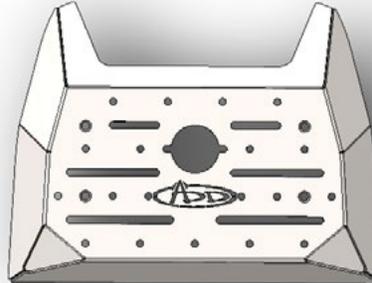

TOOLS REQUIRED

- (Socket) 7mm, 11/32
- (Allen) 5/64, 3/32, 5/16
- (Drill Bit) 25/64
- 14/20" Rivet Nut Mandrel
- Rivet Nut Hand Tool
- Ratchet



SKILL LEVEL

-Easy/Intermediate



TIME REQUIRED

- 1 hours for OEM Removal/Install



INCLUDED IN KIT

- 4- 1/4-20 X 3/4" Button Head Bolt
- 4- 1/4" Flat Washer
- 4- 1/4-20" Rivet Nut
- 4- 1/4-20 X 3/4" Hex Flat Head Bolt
- 4- 8-32 X 3/4" Button Head Bolt
- 2- 8-32" Nylon Lock Nut
- 1- 12v 24v Input 5v Dual Output USB

⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service (480) 671-0820

Addictive desert designs is *not* responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS

HARDWARE/PARTS

A.



1/4-20 X 3/4" BUTTON HEAD BOLT

QTY: 4


A1.



1/4" FLAT WASHER

QTY: 4


A2.

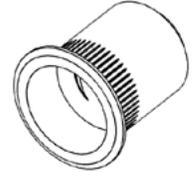

1/4-20" RIVET NUT

QTY: 4

B.

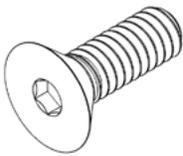

1/4-20 X 3/4" HEX FLAT HEAD BOLT

QTY: 4

C.



8-32 X 3/4" BUTTON HEAD BOLT

QTY: 4


C1.



8-32" NYLON LOCK NUT

QTY: 2

D.

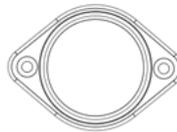

12V 24V INPUT 5V DUAL OUTPUT USB

QTY: 1

Reference this page throughout the install

DASH MOUNT 23+/FORD SUPER DUTY

REMOVAL

□ STEP 1

Remove the cover for the speaker by pulling up.



DASH MOUNT 23+ / FORD SUPER DUTY

REMOVAL

□ STEP 2

Remove the bolts located on each side of the speaker using a (7mm socket).





DASH MOUNT 23+ / FORD SUPER DUTY

REMOVAL

□ STEP 3

Pull the tray upwards to remove and unplug the speaker plug-in.

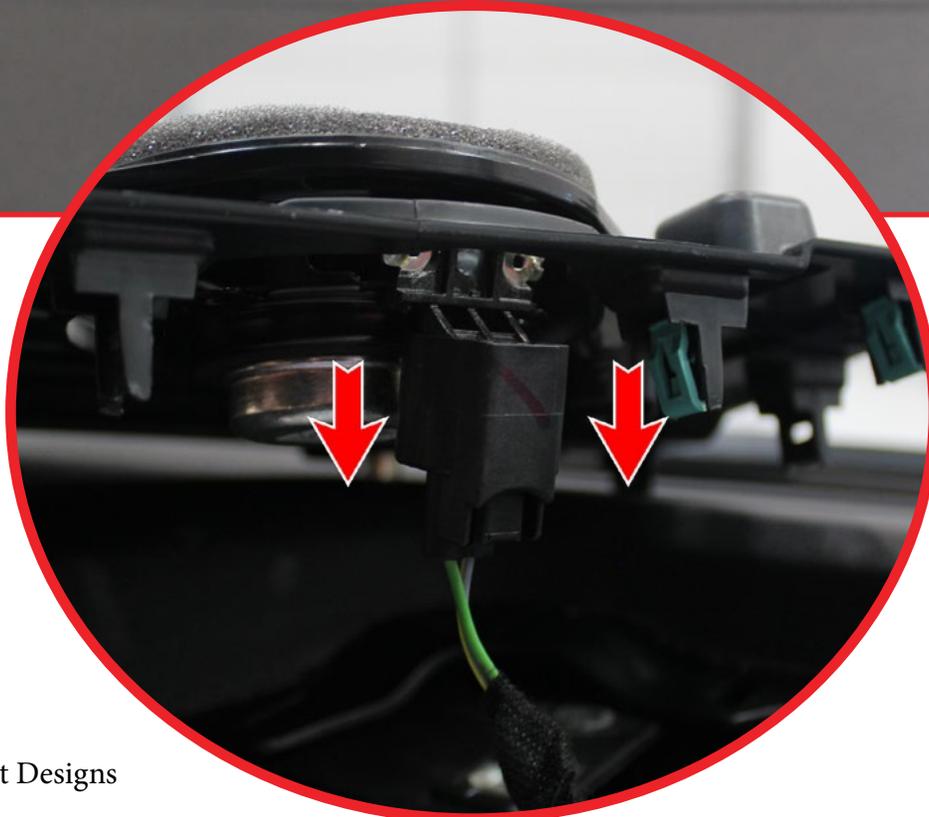
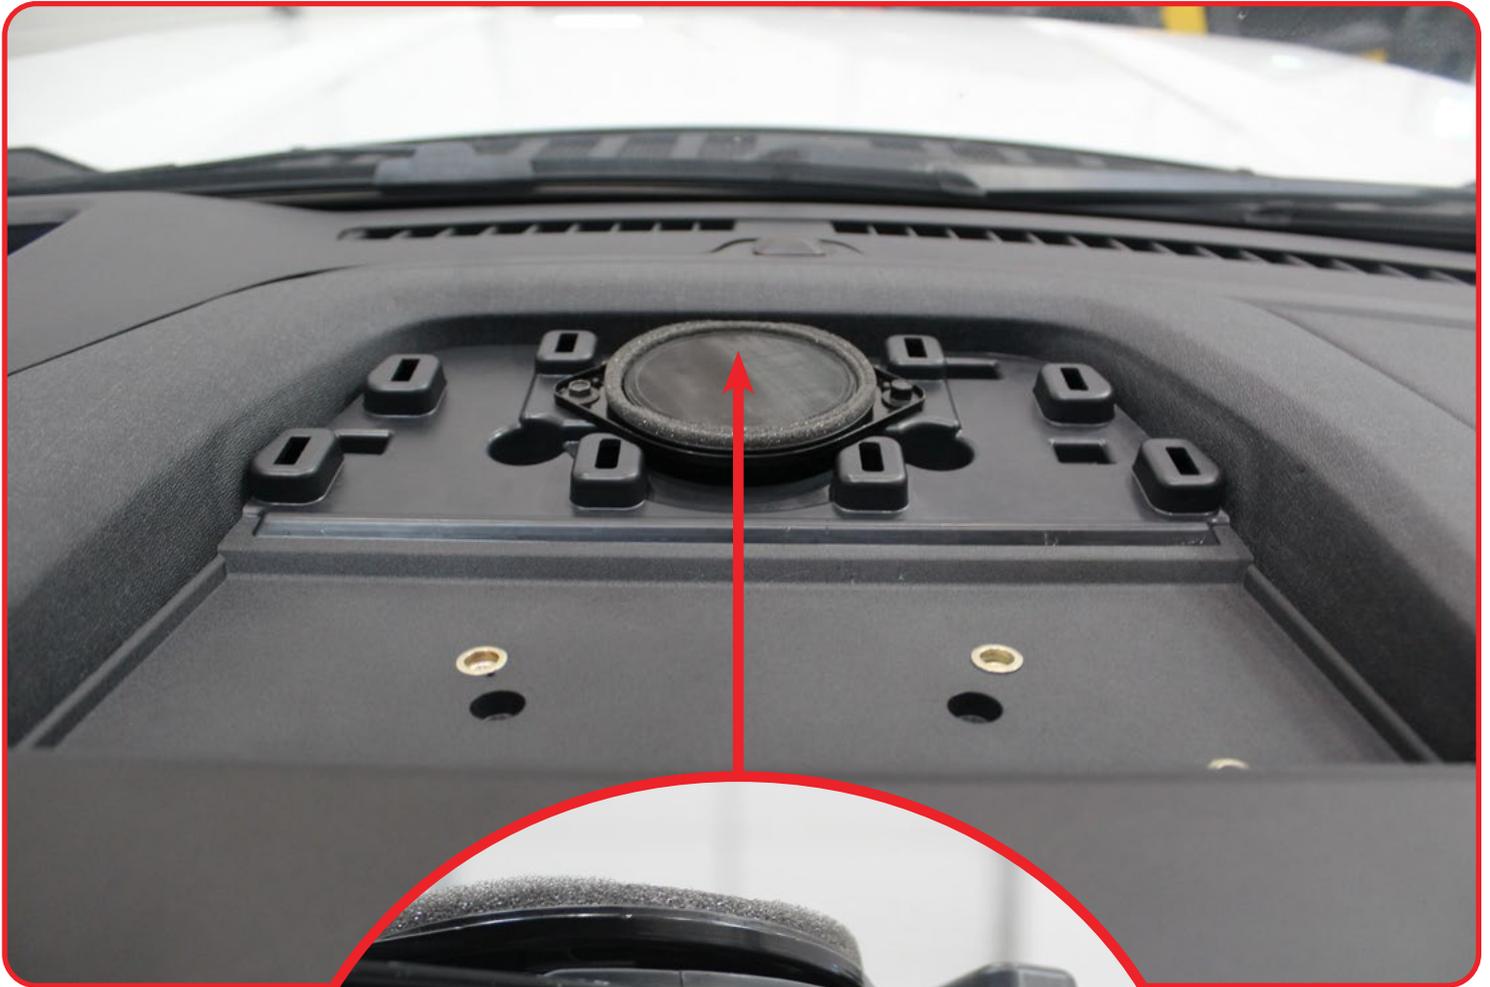


DASH MOUNT 23+/FORD SUPER DUTY

INSTALL

□ STEP 4

Install the ADD badge with the provided (C) using a (3/32 allen).

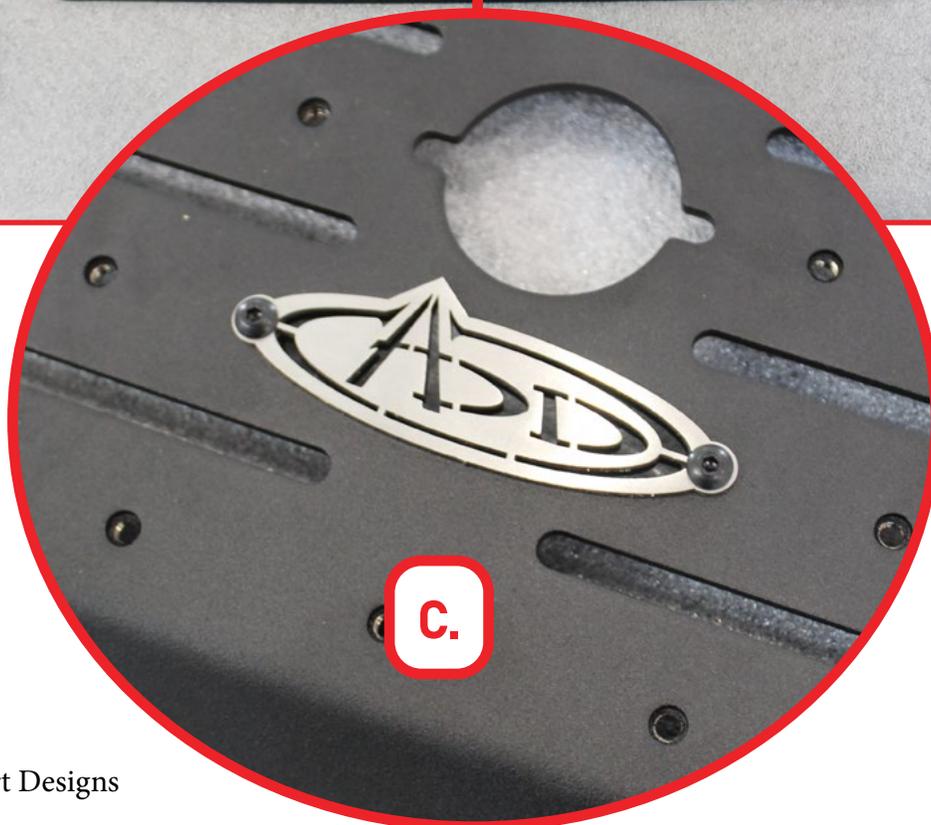
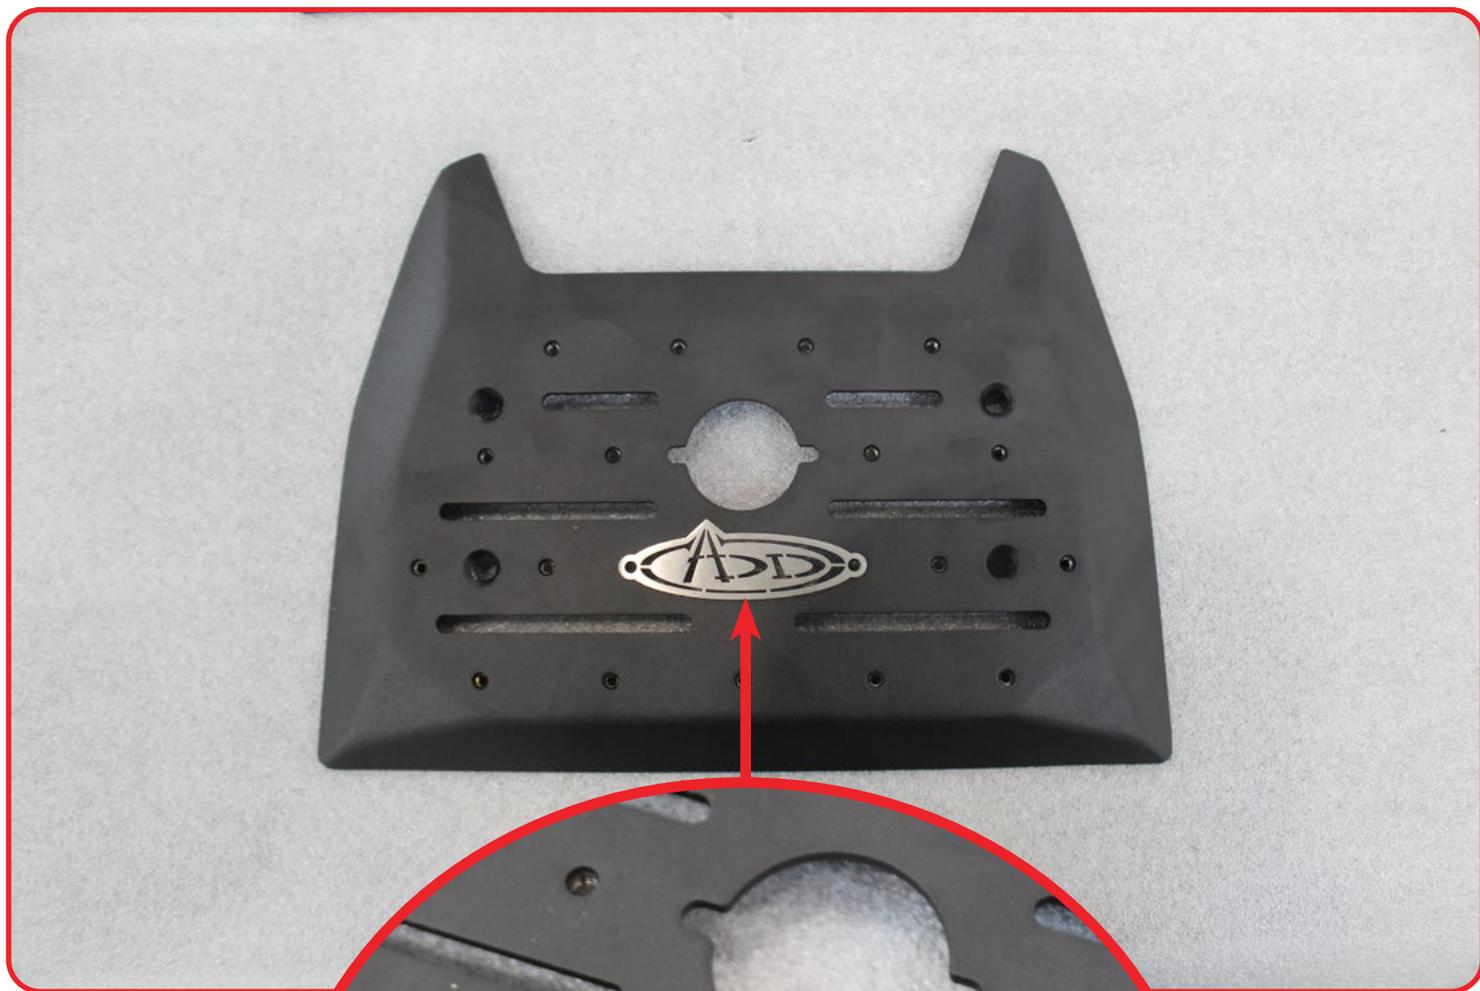


DASH MOUNT 23+/FORD SUPER DUTY

INSTALL

□ STEP 5

Install (**C, C1**) using a (5/64 allen) and a (11/32 wrench).

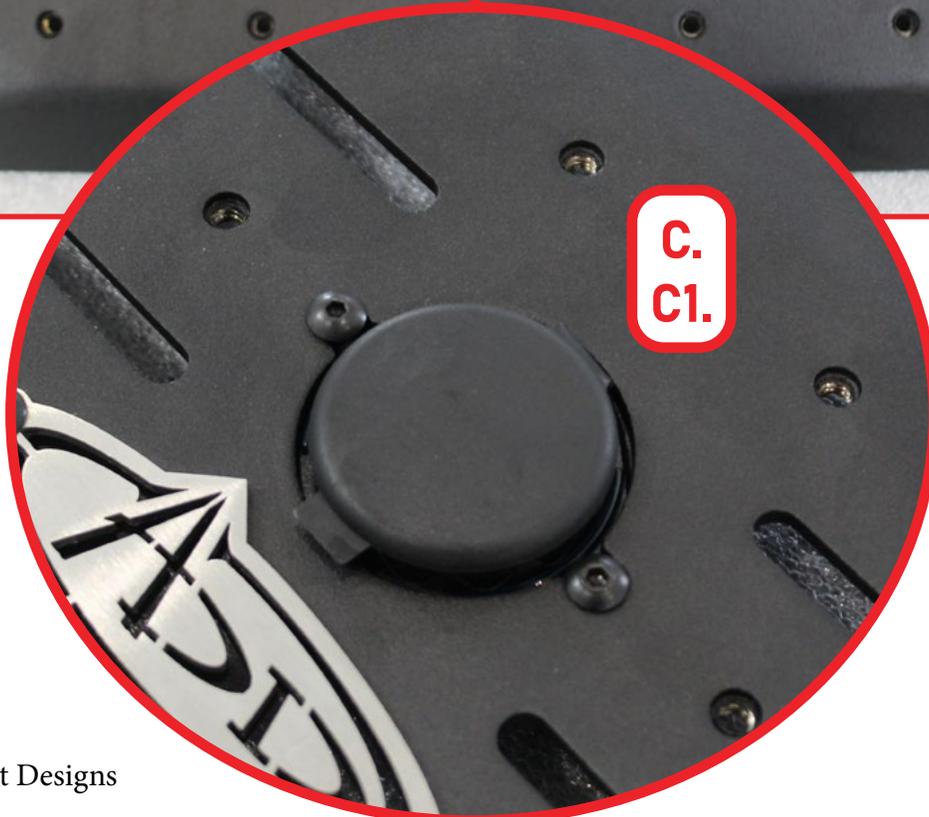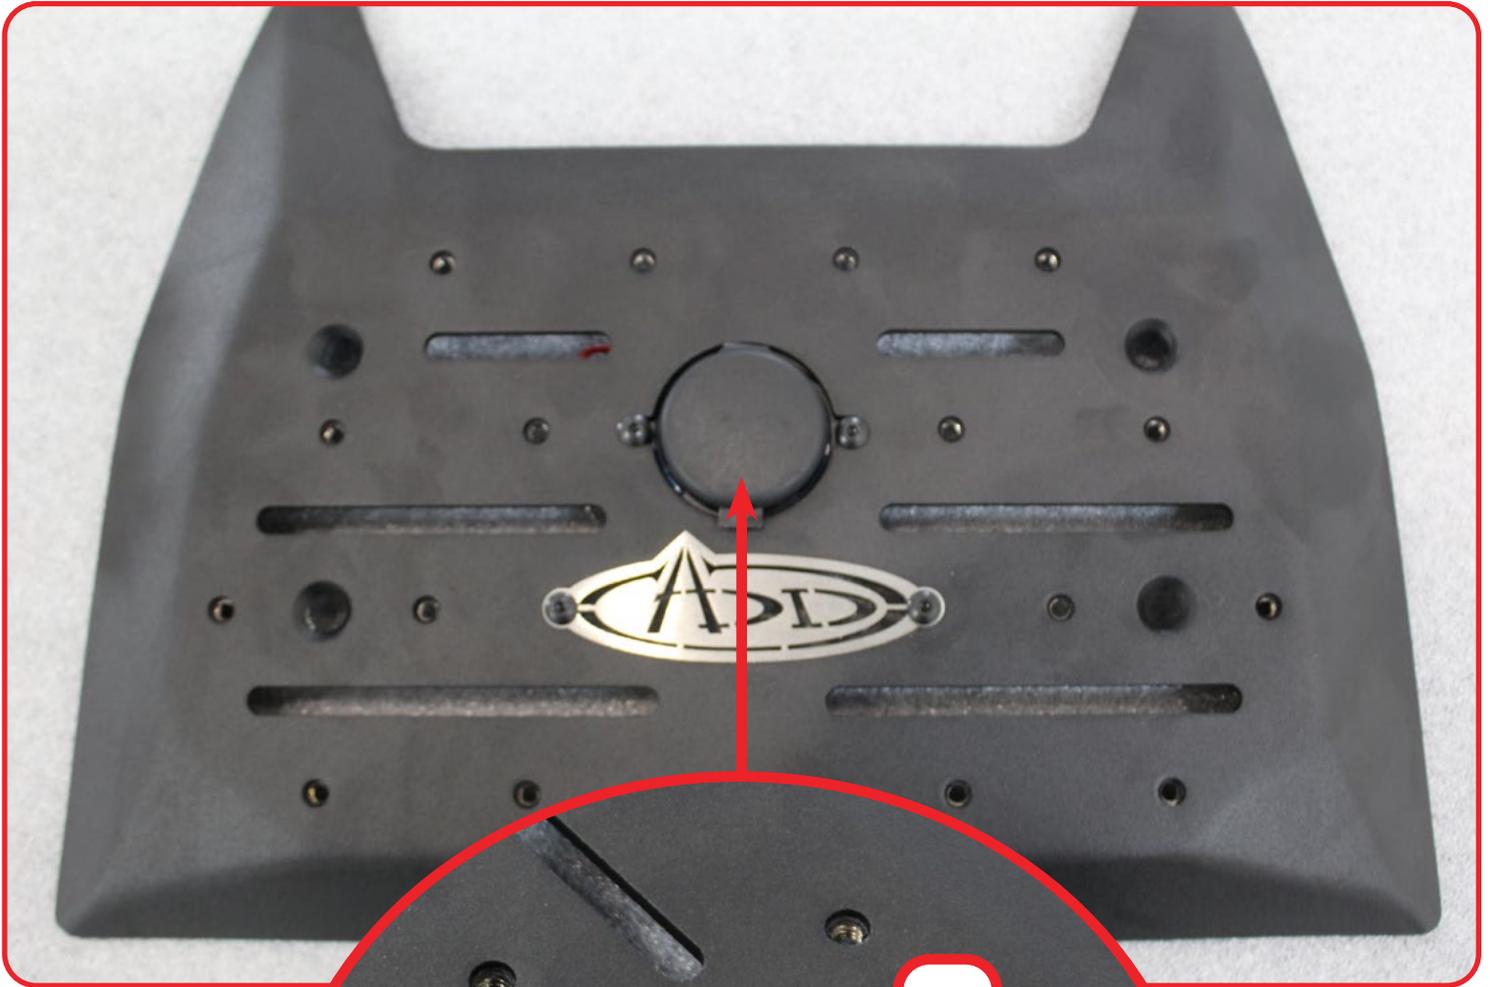


DASH MOUNT 23+ / FORD SUPER DUTY

INSTALL

□ STEP 6

Place the mounting bracket on the tray. Ensure that the bracket is placed center on the tray and the front of the bracket is aligned with the speaker cover. Mark the holes.

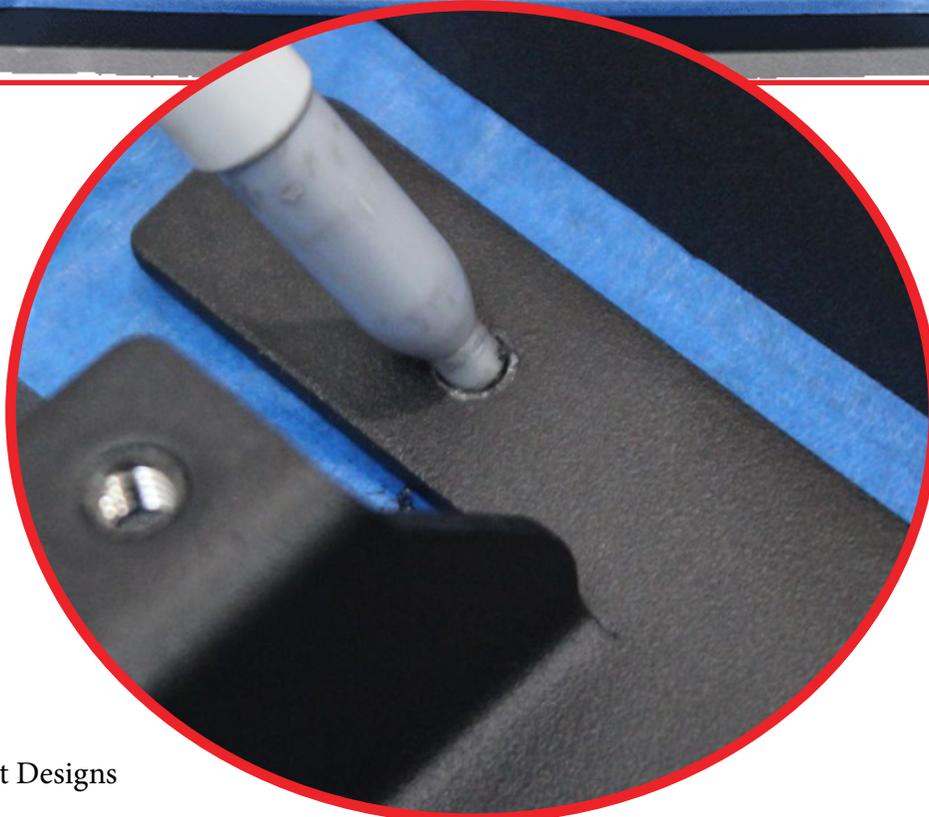


DASH MOUNT
23+/FORD SUPER DUTY

INSTALL

STEP 7

Remove the bracket and drill the marked holes with a (25/64 drill bit).

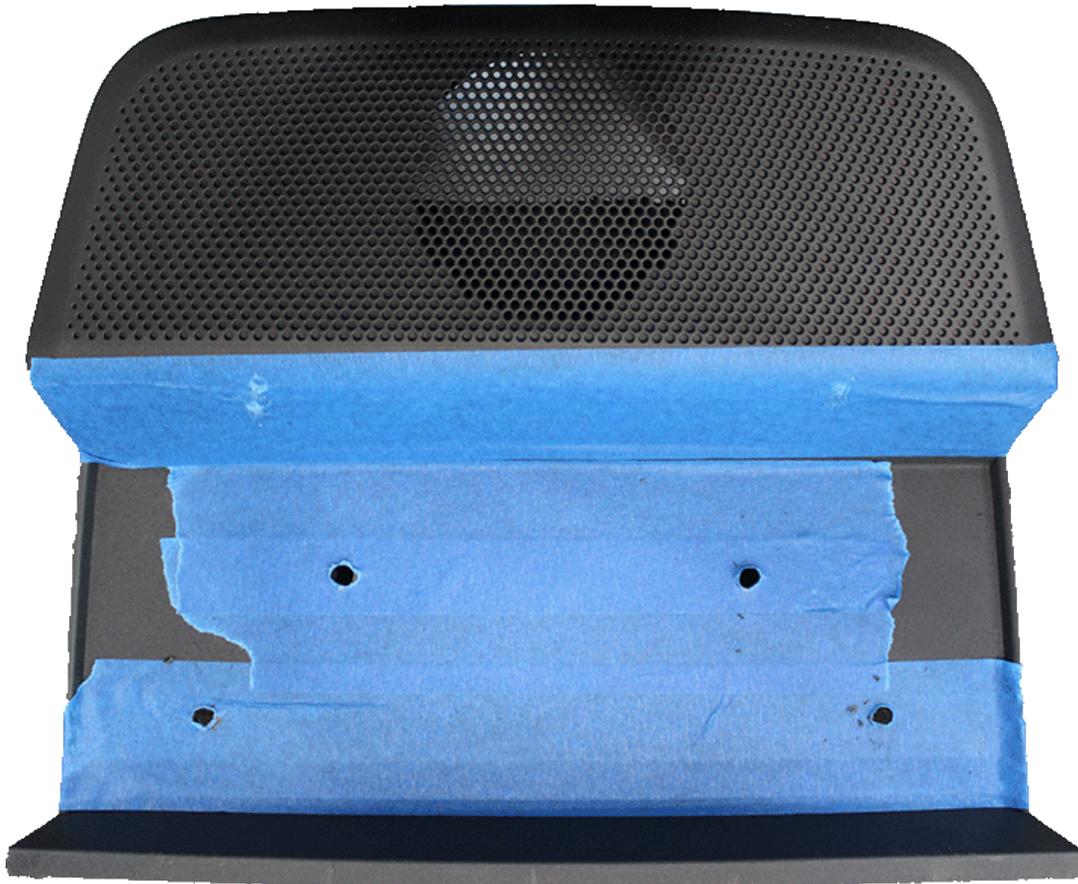


DASH MOUNT 23+ / FORD SUPER DUTY

INSTALL

□ STEP 8

Install the provided (A2) with a (1/4-20 rivet nut mandrel) and a (rivet nut hand tool).


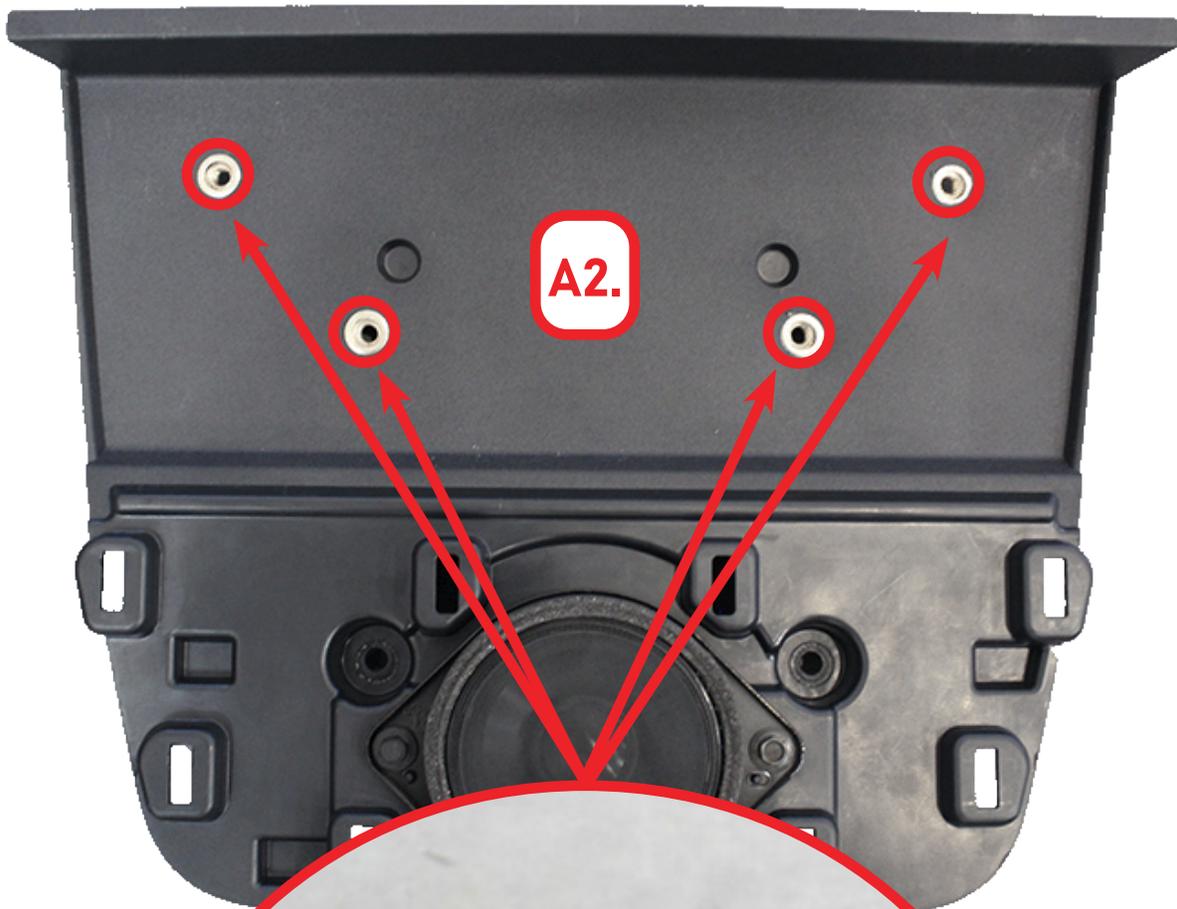


DASH MOUNT 23+ / FORD SUPER DUTY

INSTALL

□ STEP 9

Plug the speaker back in and install the tray back into the truck.

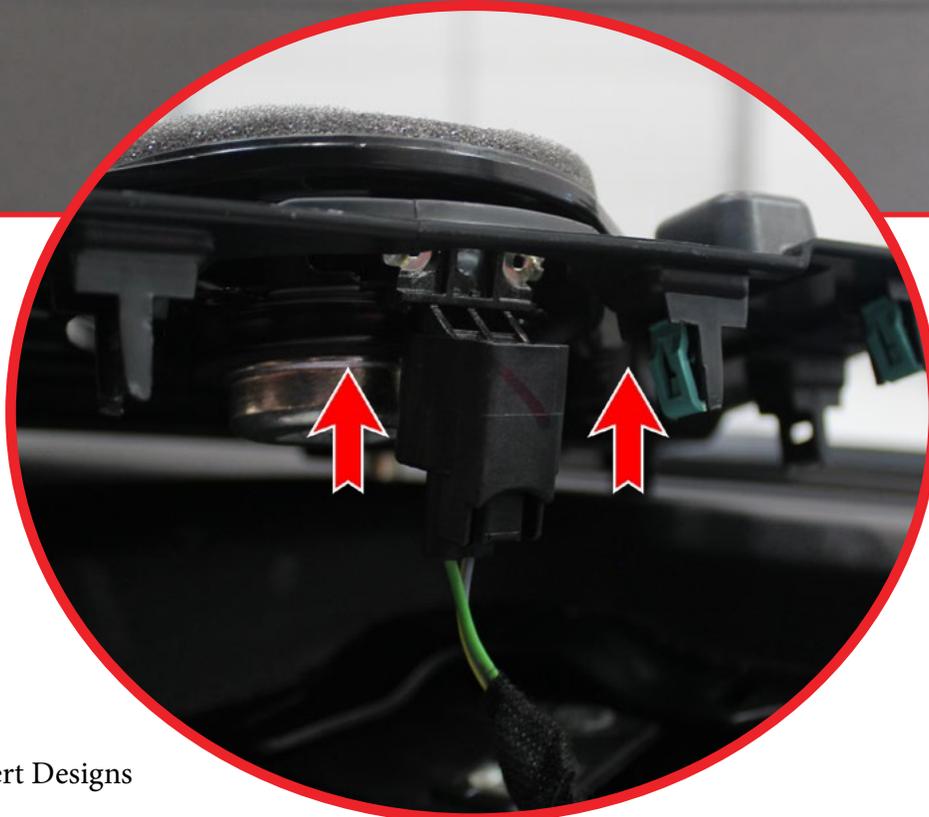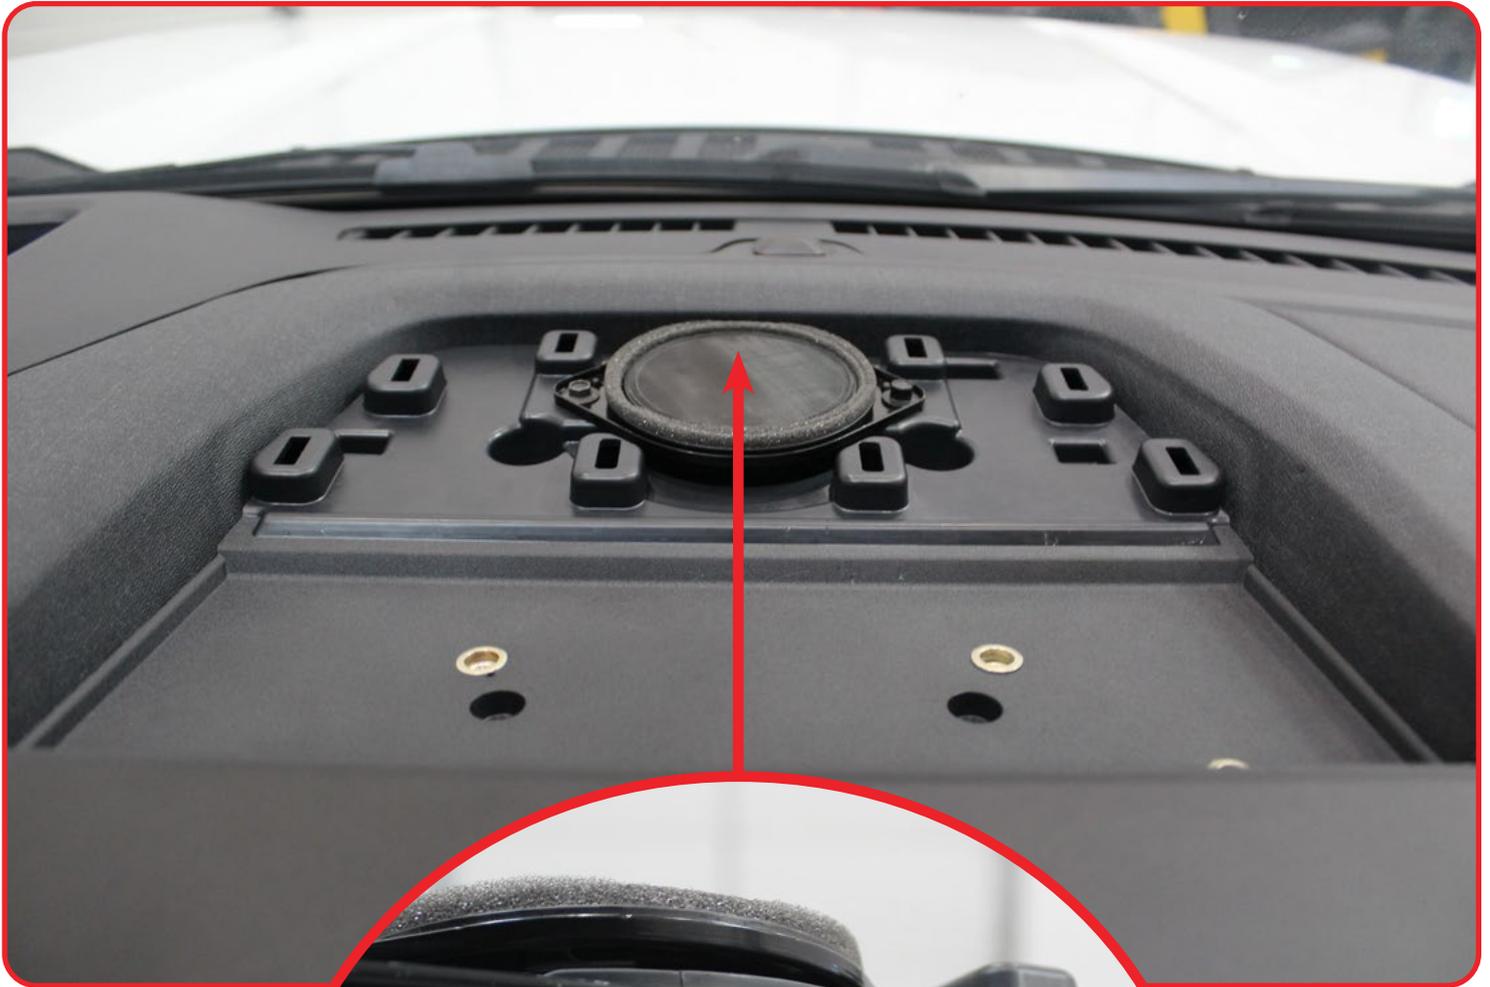


DASH MOUNT 23+ / FORD SUPER DUTY

INSTALL

□ STEP 10

Install the OEM bolts removed from **step 2** with a (7mm socket).

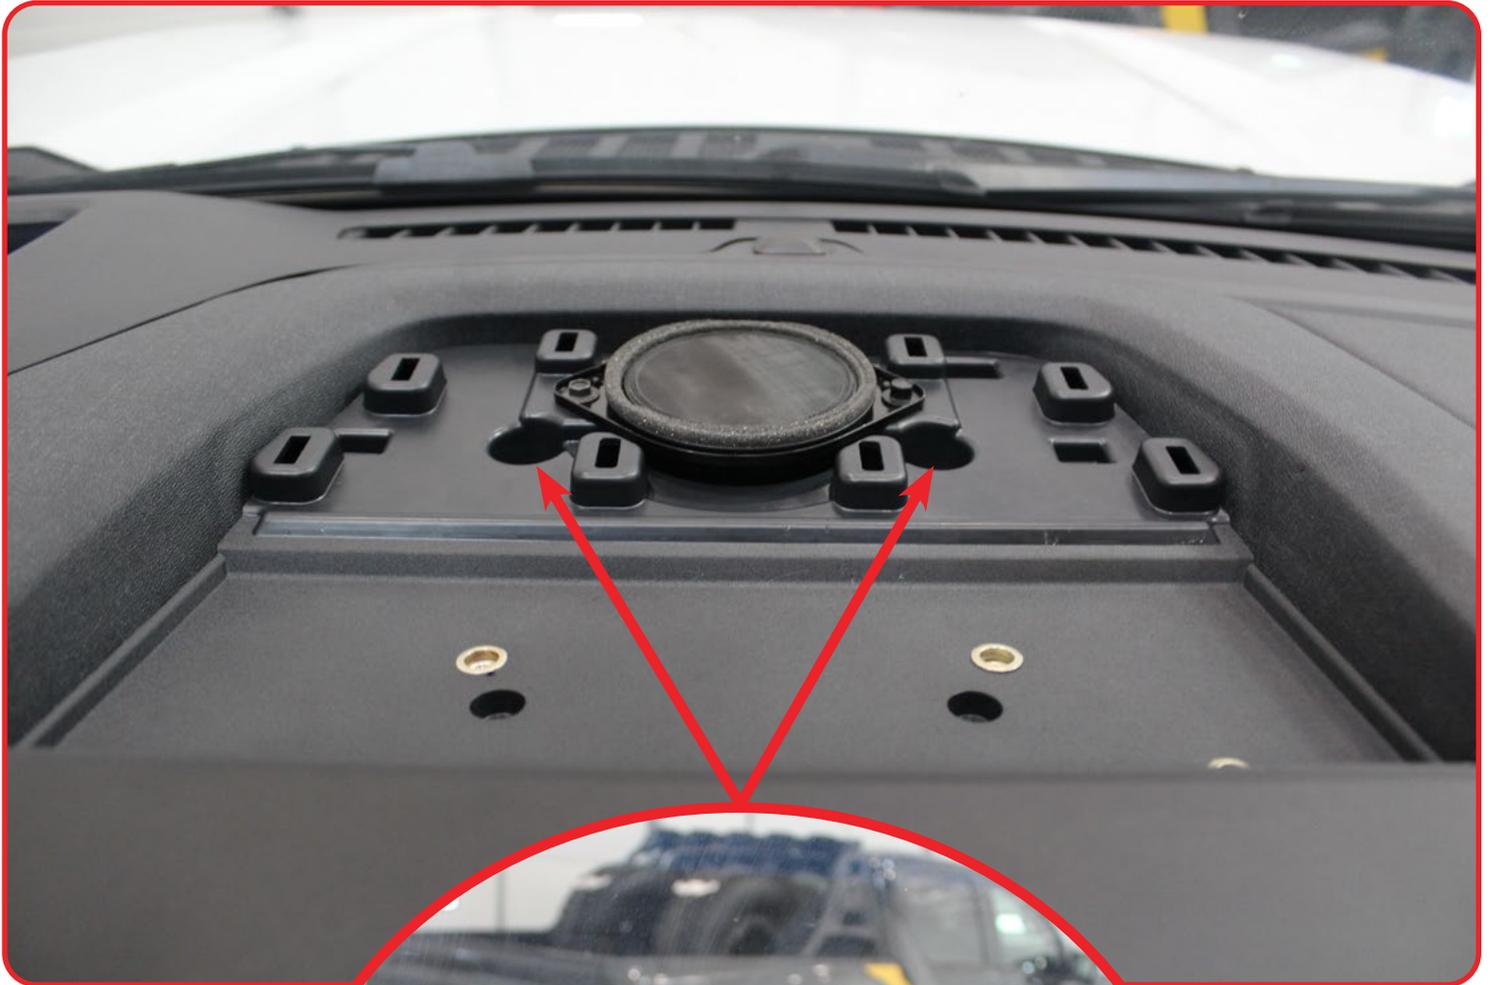

DASH MOUNT 23+ / FORD SUPER DUTY

INSTALL

STEP 11

Install the speaker cover back on.




DASH MOUNT 23+ / FORD SUPER DUTY

INSTALL

□ STEP 12

Install the mounting bracket with the provided (A, A1) hardware using a (5/16 allen).

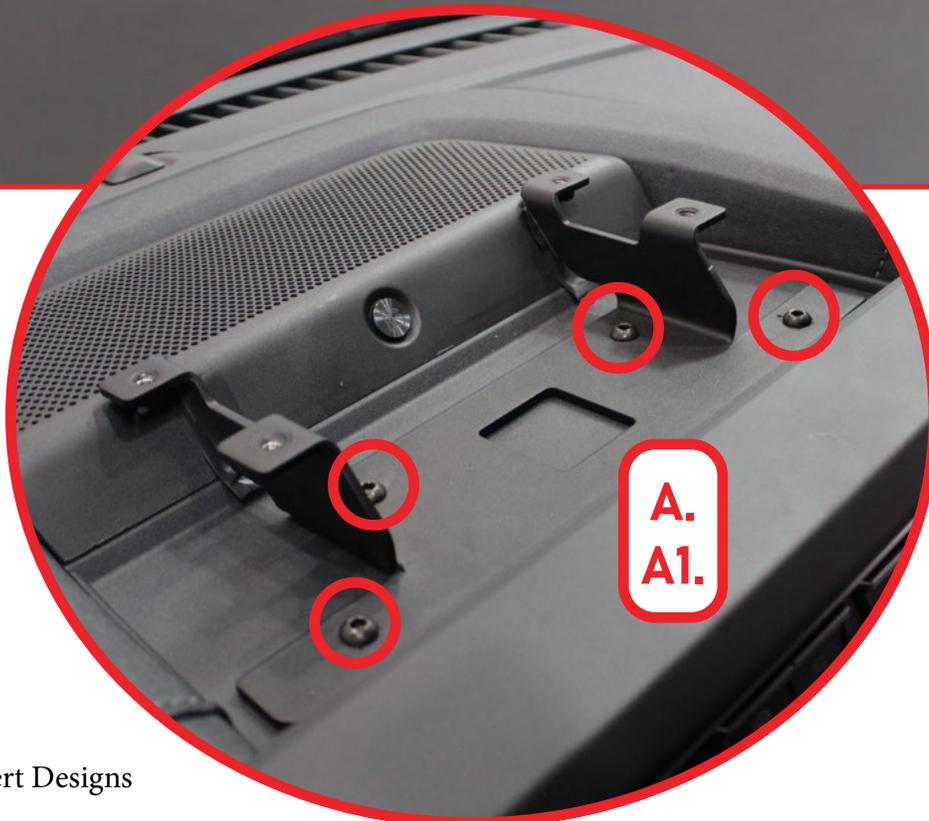


DASH MOUNT 23+/FORD SUPER DUTY

INSTALL

STEP 13

Install the dash mount with the provided **(B)** hardware using a (5/16 allen).

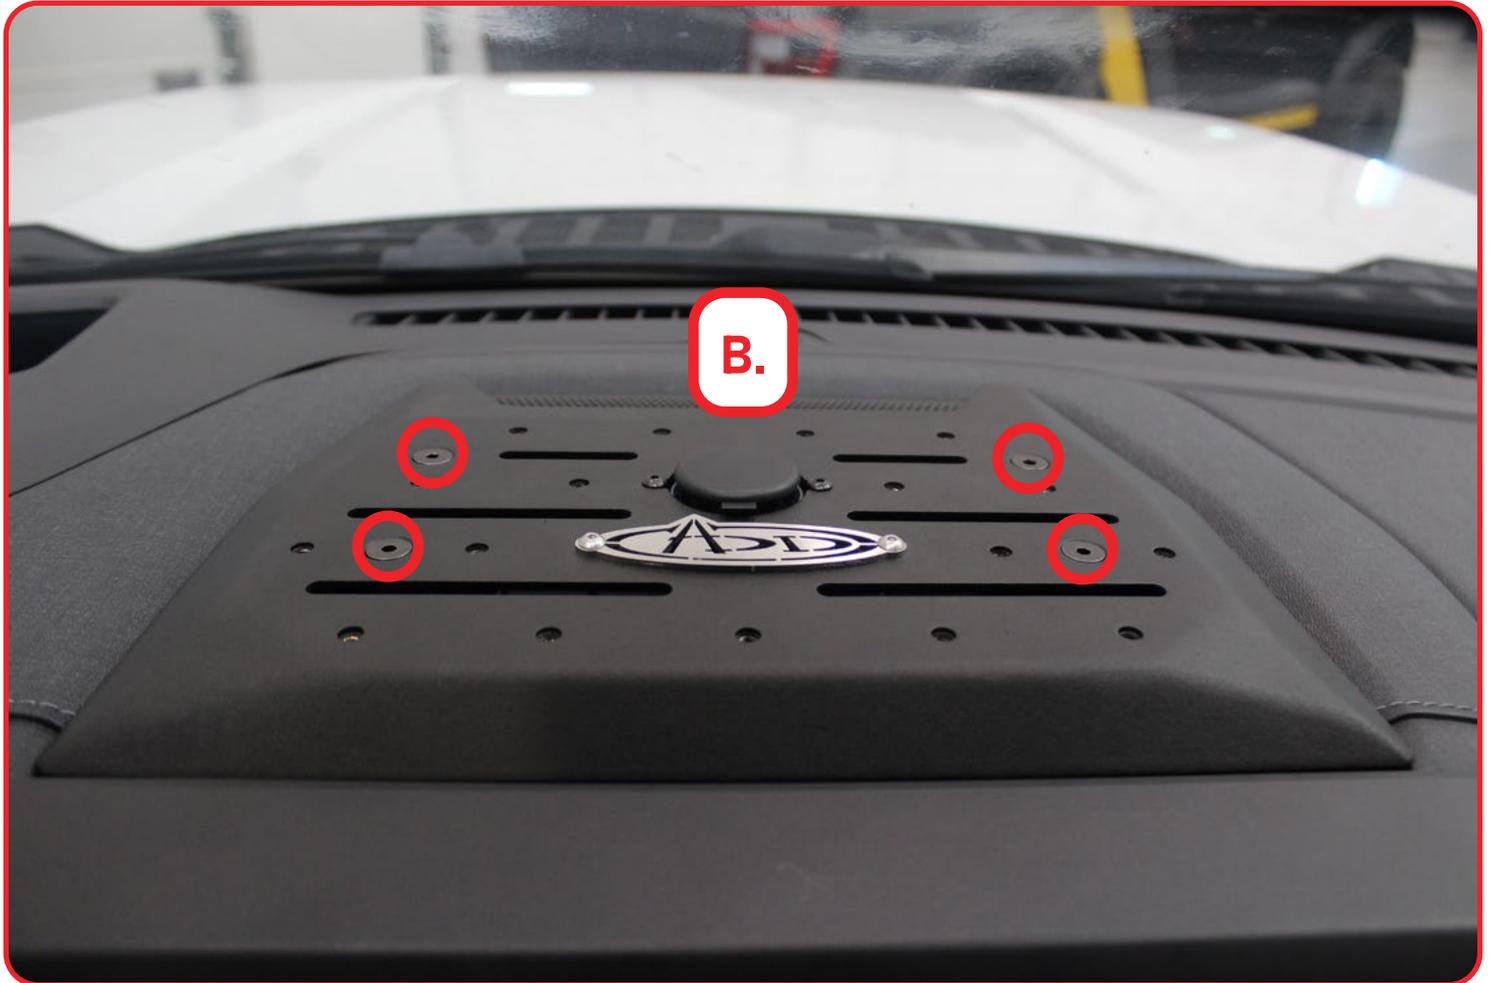

DASH MOUNT 23+/FORD SUPER DUTY

FINAL

STEP 14

Stand back and enjoy your new ADD Dash Mount.

Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS
WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,
PLEASE CALL 480-671-0820 OR
EMAIL INFO@ADDICTIVEDESERTDESIGNS.COM