


## 23+/FORD SUPER DUTY

### DITCH LIGHT MOUNTS

AC8101801NA

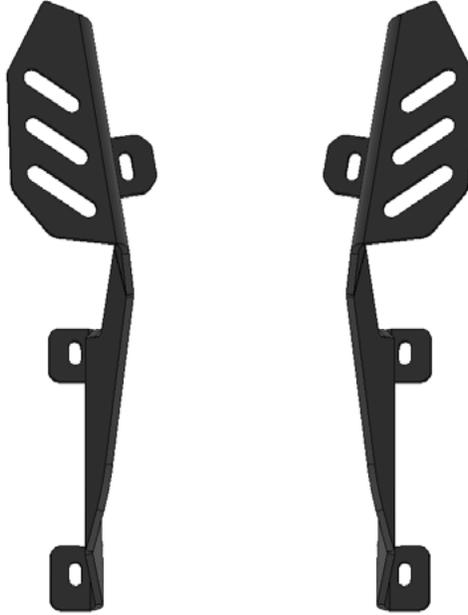

#### TOOLS REQUIRED

(Wrench) 10mm, 13mm

(Socket) 10mm, 13mm

Ratchet



#### TIME REQUIRED

- 1 hours for OEM Removal/Bracket Install



#### SKILL LEVEL

-Easy/Intermediate

## ⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

#### -BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service (480) 671-0820

Addictive desert designs is *not* responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover


**\*ALWAYS WEAR EYE PROTECTION  
WHEN OPERATING POWER TOOLS\***

## DITCH LIGHT MOUNTS 23+ / FORD SUPER DUTY

## REMOVAL

### STEP 1

Remove the wiper blades by prying the metal tab outwards and pulling the wiper blade upwards.

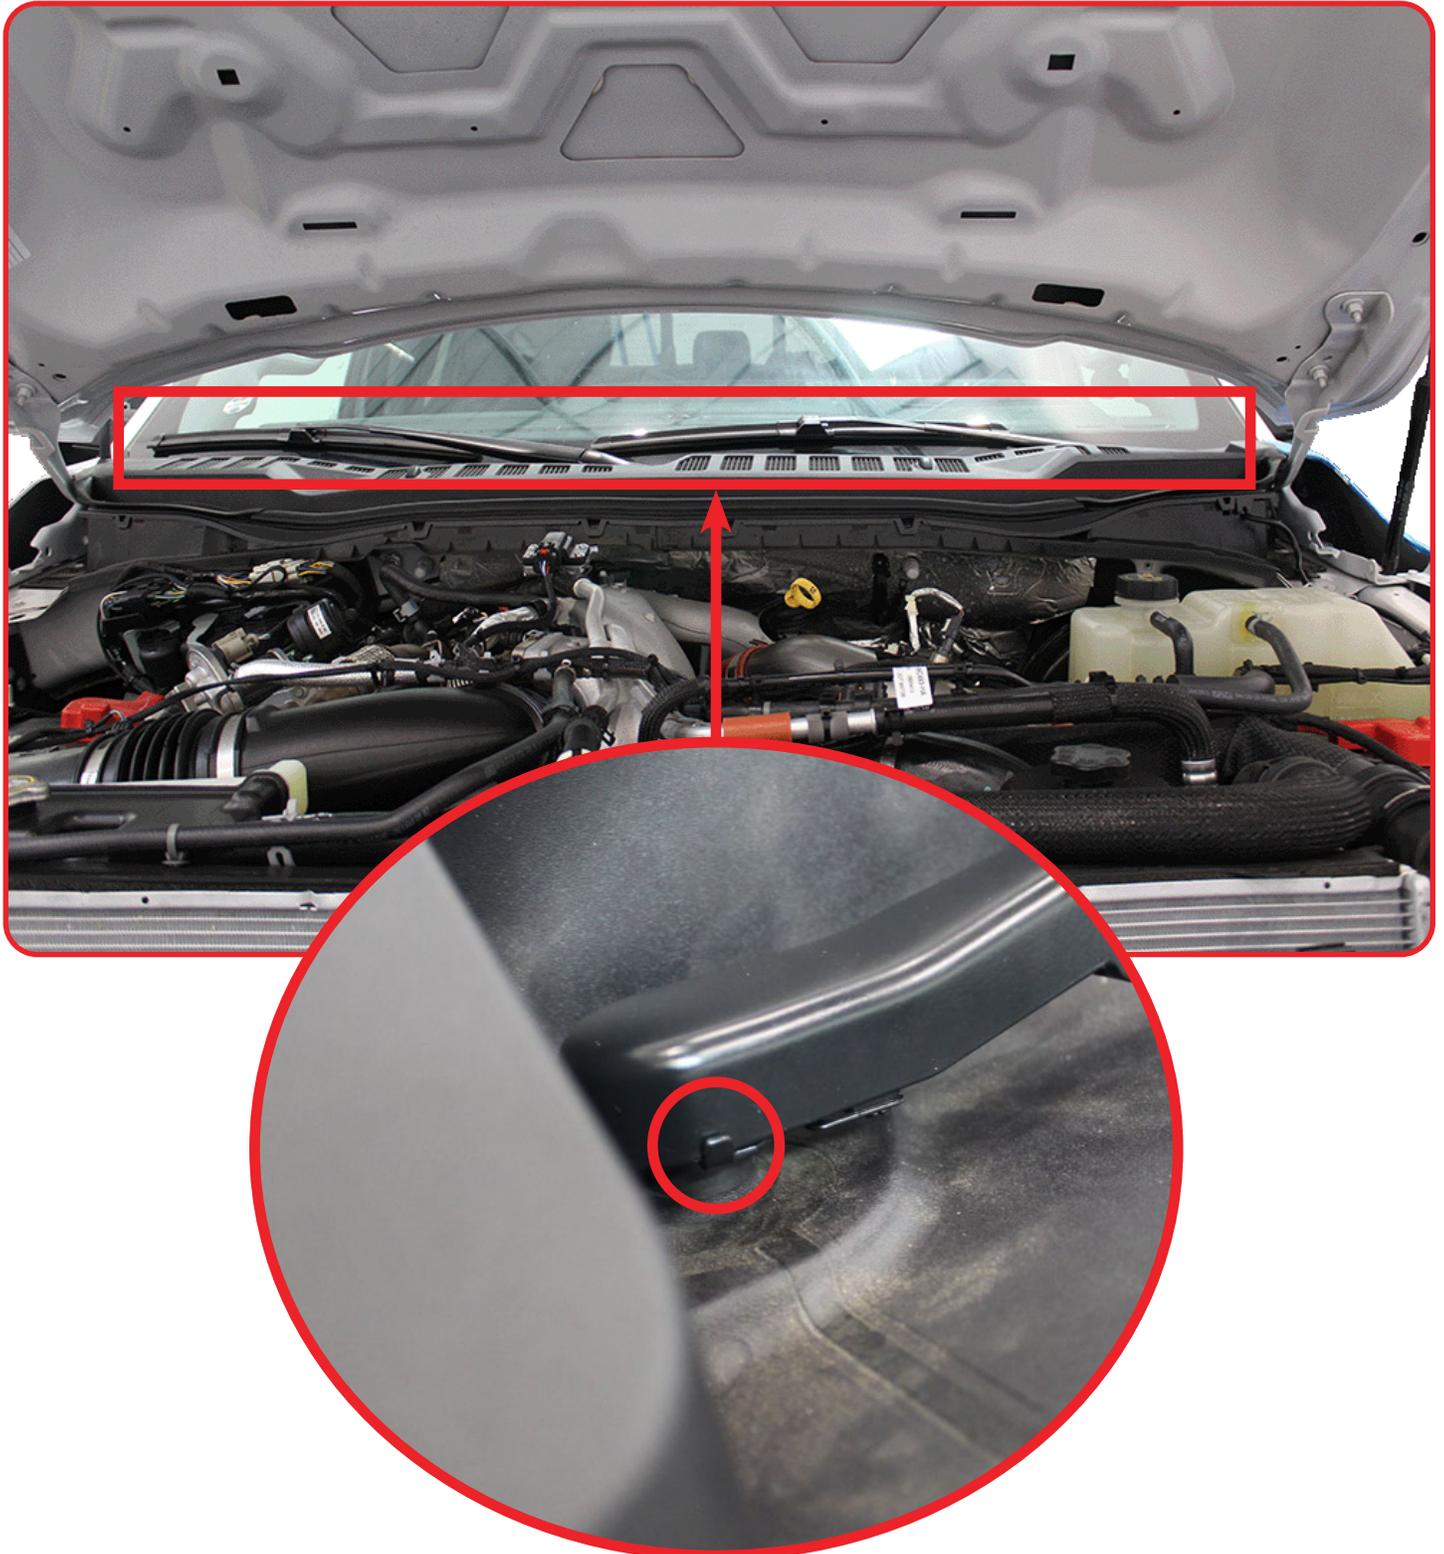


## DITCH LIGHT MOUNTS

23+/FORD SUPER DUTY

## REMOVAL

### STEP 2

Next remove the plastic flashing by prying on the plastic tabs highlighted below. **\*\*Pry with caution due to breakage\*\***

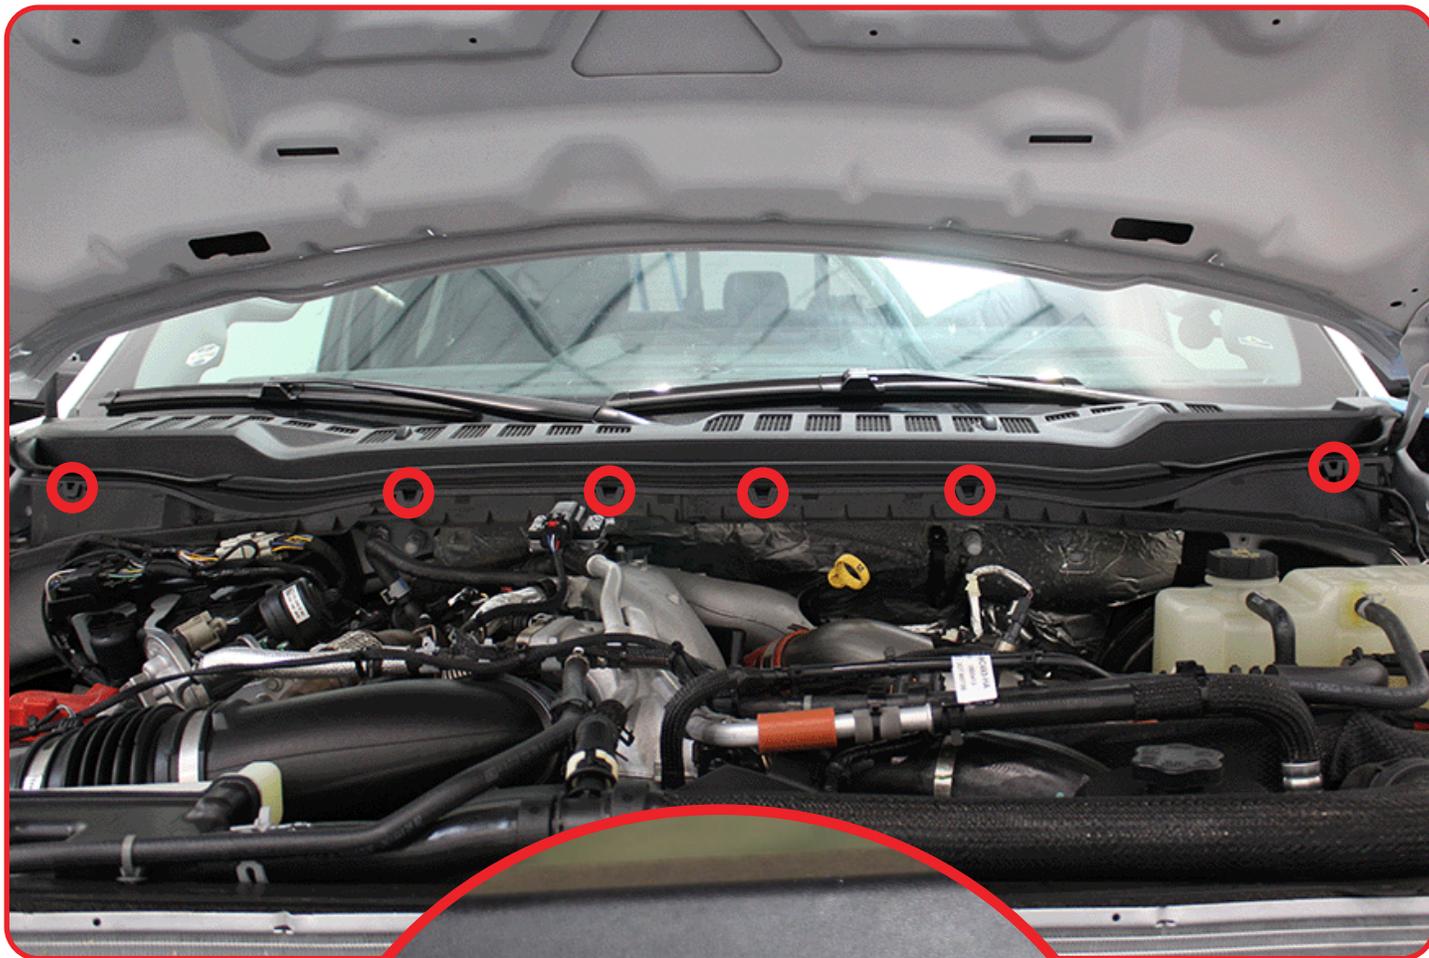


## DITCH LIGHT MOUNTS 23+/FORD SUPER DUTY

## REMOVAL

### □ STEP 3

Next remove the 4x (two on each side) OEM bolts using a (13mm socket). (keep hardware for they will be re-used later on in the install)

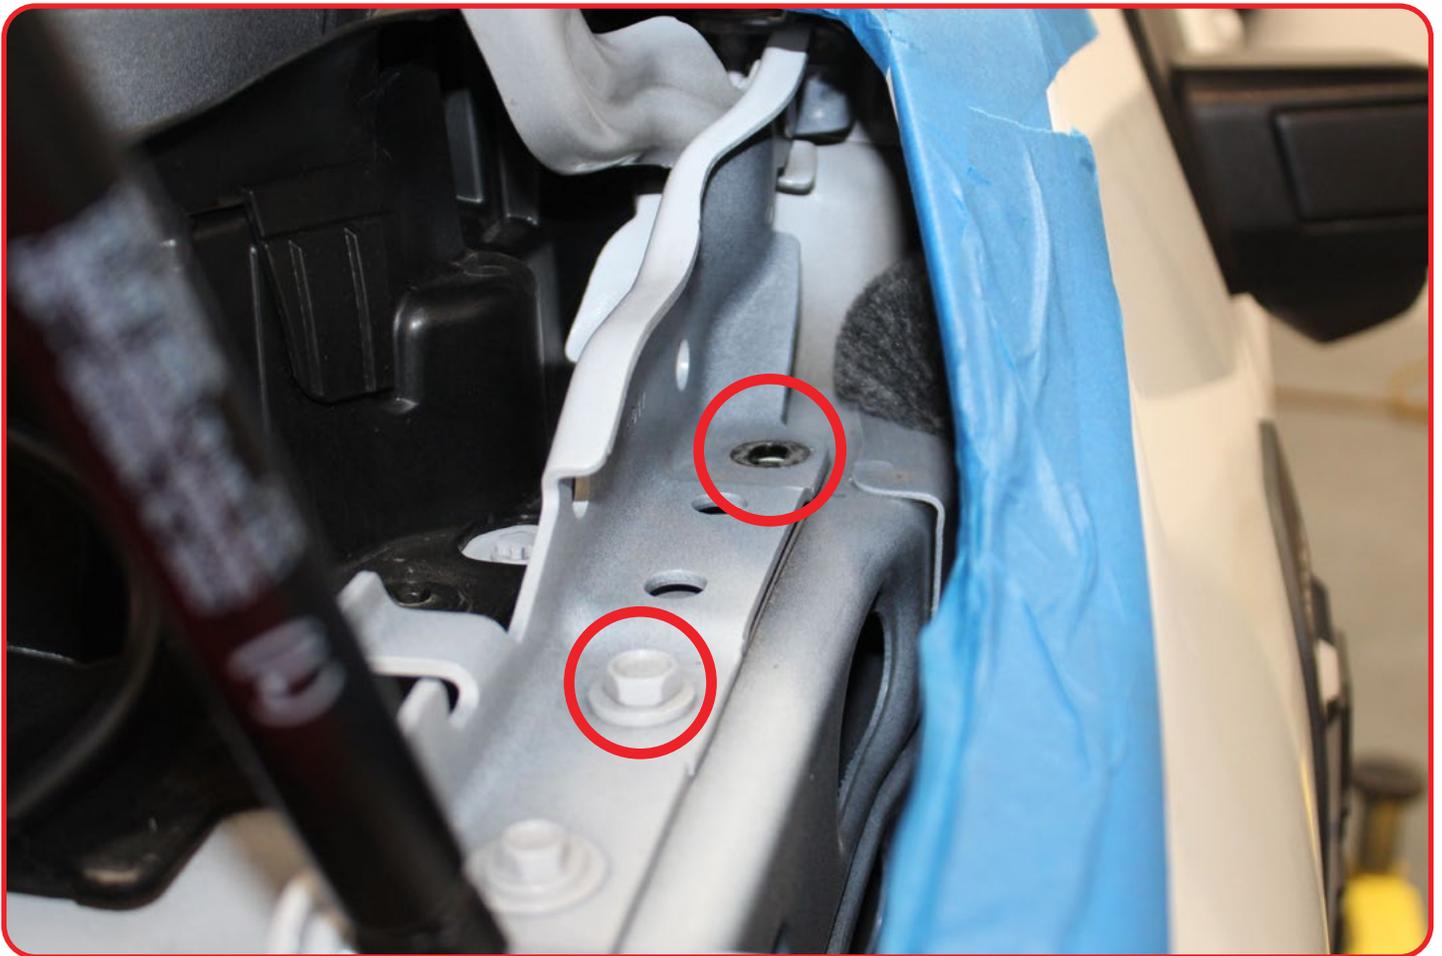

## DITCH LIGHT MOUNTS 23+/FORD SUPER DUTY

## REMOVAL

### STEP 4

Next remove the top 2x (one on each side) OEM bolts using a (10mm socket). (keep hardware for they will be re-used later on in the install)



## DITCH LIGHT MOUNTS 23+ / FORD SUPER DUTY

## INSTALL

### STEP 5

Install the ditch mount using the OEM hardware removed from **step 6** with a (10mm socket).



## DITCH LIGHT MOUNTS 23+ / FORD SUPER DUTY

## INSTALL

### STEP 6

Install the hardware removed from **step 4** using a (13mm socket).



## DITCH LIGHT MOUNTS 23+ / FORD SUPER DUTY

## INSTALL

### STEP 7

Install the plastic flashing.




## DITCH LIGHT MOUNTS 23+/FORD SUPER DUTY

## REMOVAL

### □ STEP 8

Install the wiper blades by prying the metal tab out and pushing down until they click into place.

**\*\*Ensure that the metal pin is installed to install the blades back into the same positioning\*\***

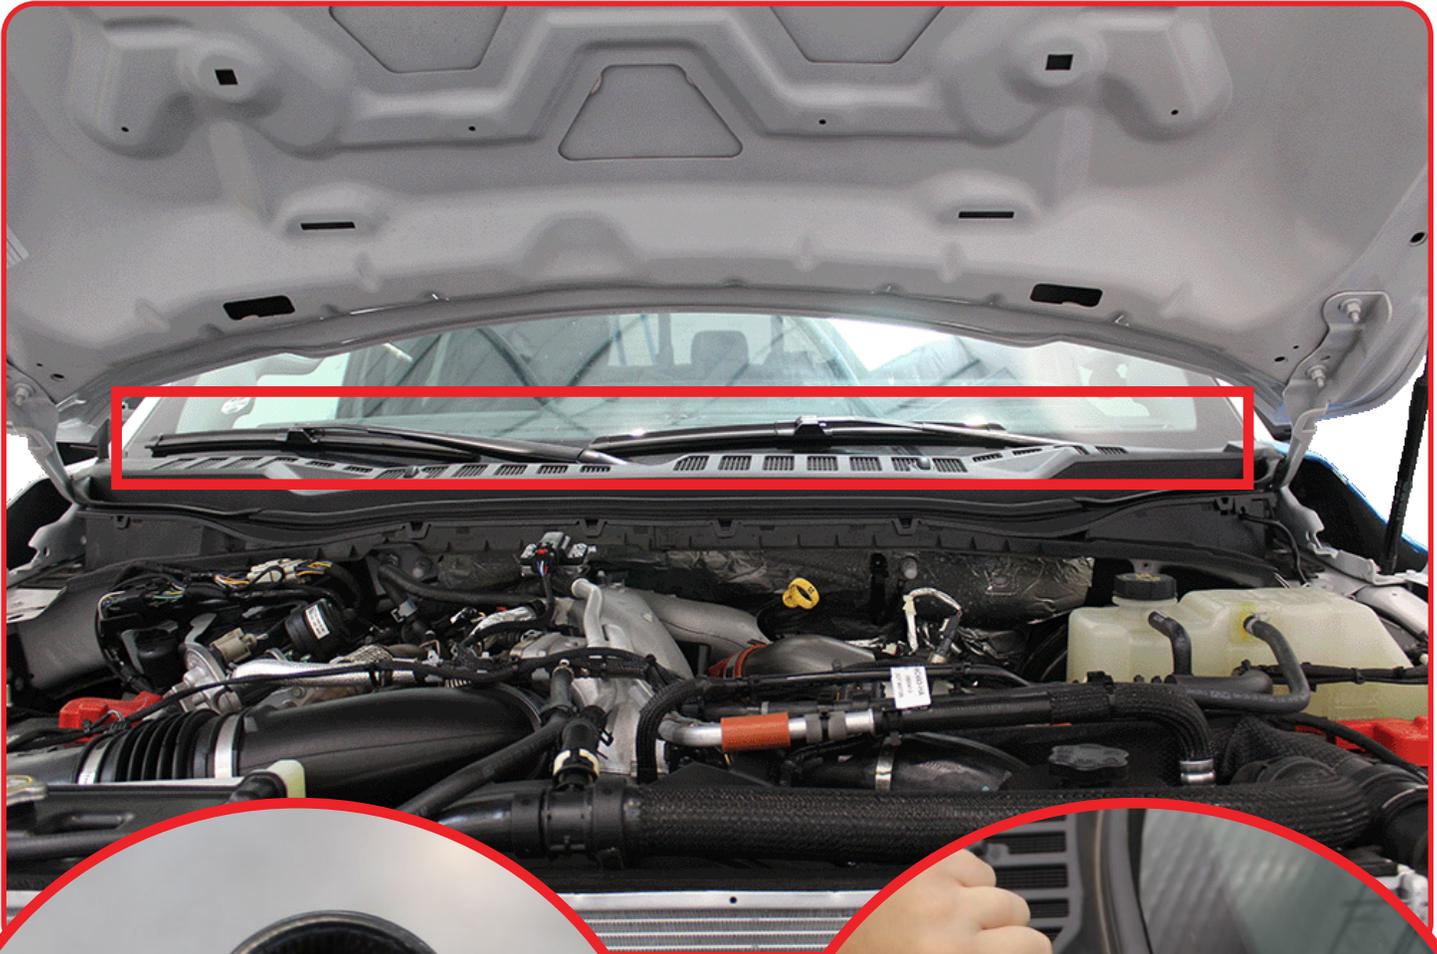

## DITCH LIGHT MOUNTS 23+ / FORD SUPER DUTY

## FINAL

### □ STEP 9

Stand back and enjoy your new ADD Ditch Light Mounts.

Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS  
[WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS](http://WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS)

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,  
PLEASE CALL 480-671-0820 OR  
EMAIL [INFO@ADDICTIVEDESERTDESIGNS.COM](mailto:INFO@ADDICTIVEDESERTDESIGNS.COM)