




INSTALLATION GUIDE

2025-UP/RAM RHO

BED SIDE MOLLE DRIVER

AC6303201NA

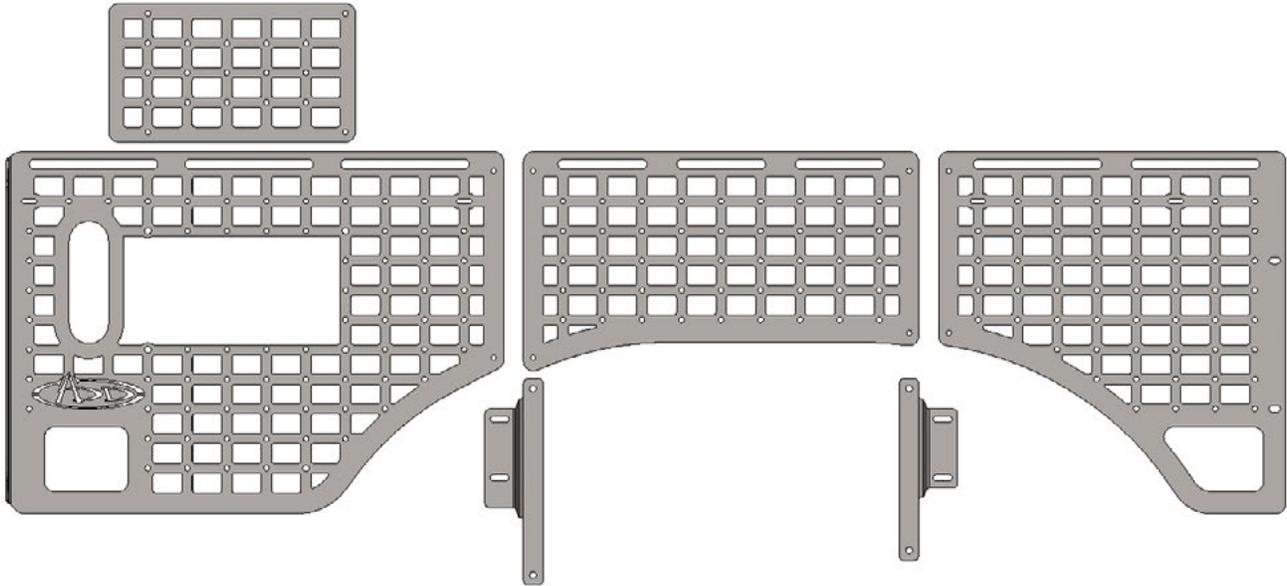

TOOLS REQUIRED

- (Allen) 5/32
- (Wrench) 7/16
- (Socket) 10mm
- (Drill Bit) 25/64
- Ratchet
- Rivet Nut Hand Tool



TIME REQUIRED

- 45 Minutes



SKILL LEVEL



Easy

⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service (480) 671-0820

Additive desert designs is *not* responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover


ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS



INSTALLATION GUIDE

HARDWARE/PARTS

A.

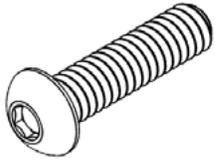

1/4-20 X 3/4" BUTTON HEAD BOLT

QTY: 10


A1.



1/4" FLAT WASHER

QTY: 13


A2.

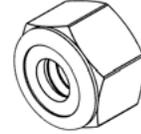

1/4-20" NYLON LOCK NUT BLACK

QTY: 2


A3.

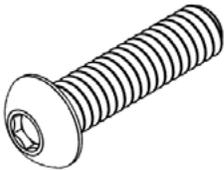

1/4-20 X 1" BUTTON HEAD BOLT

QTY: 1

B.

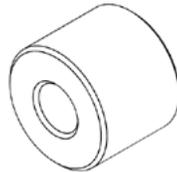

1/4" SPACER

QTY: 1

C.



1/4" PUSH NUT

QTY: 1

D.



1/4-20" RIVET NUT

QTY: 5

E.



1/4" SPACER

QTY: 1

E1.



1/4" PUSH NUT

QTY: 1

Reference this page throughout the install




INSTALLATION GUIDE

BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

REMOVAL

□ STEP 1

Using a (10mm) remove the 4x tie-down hook mounting brackets.

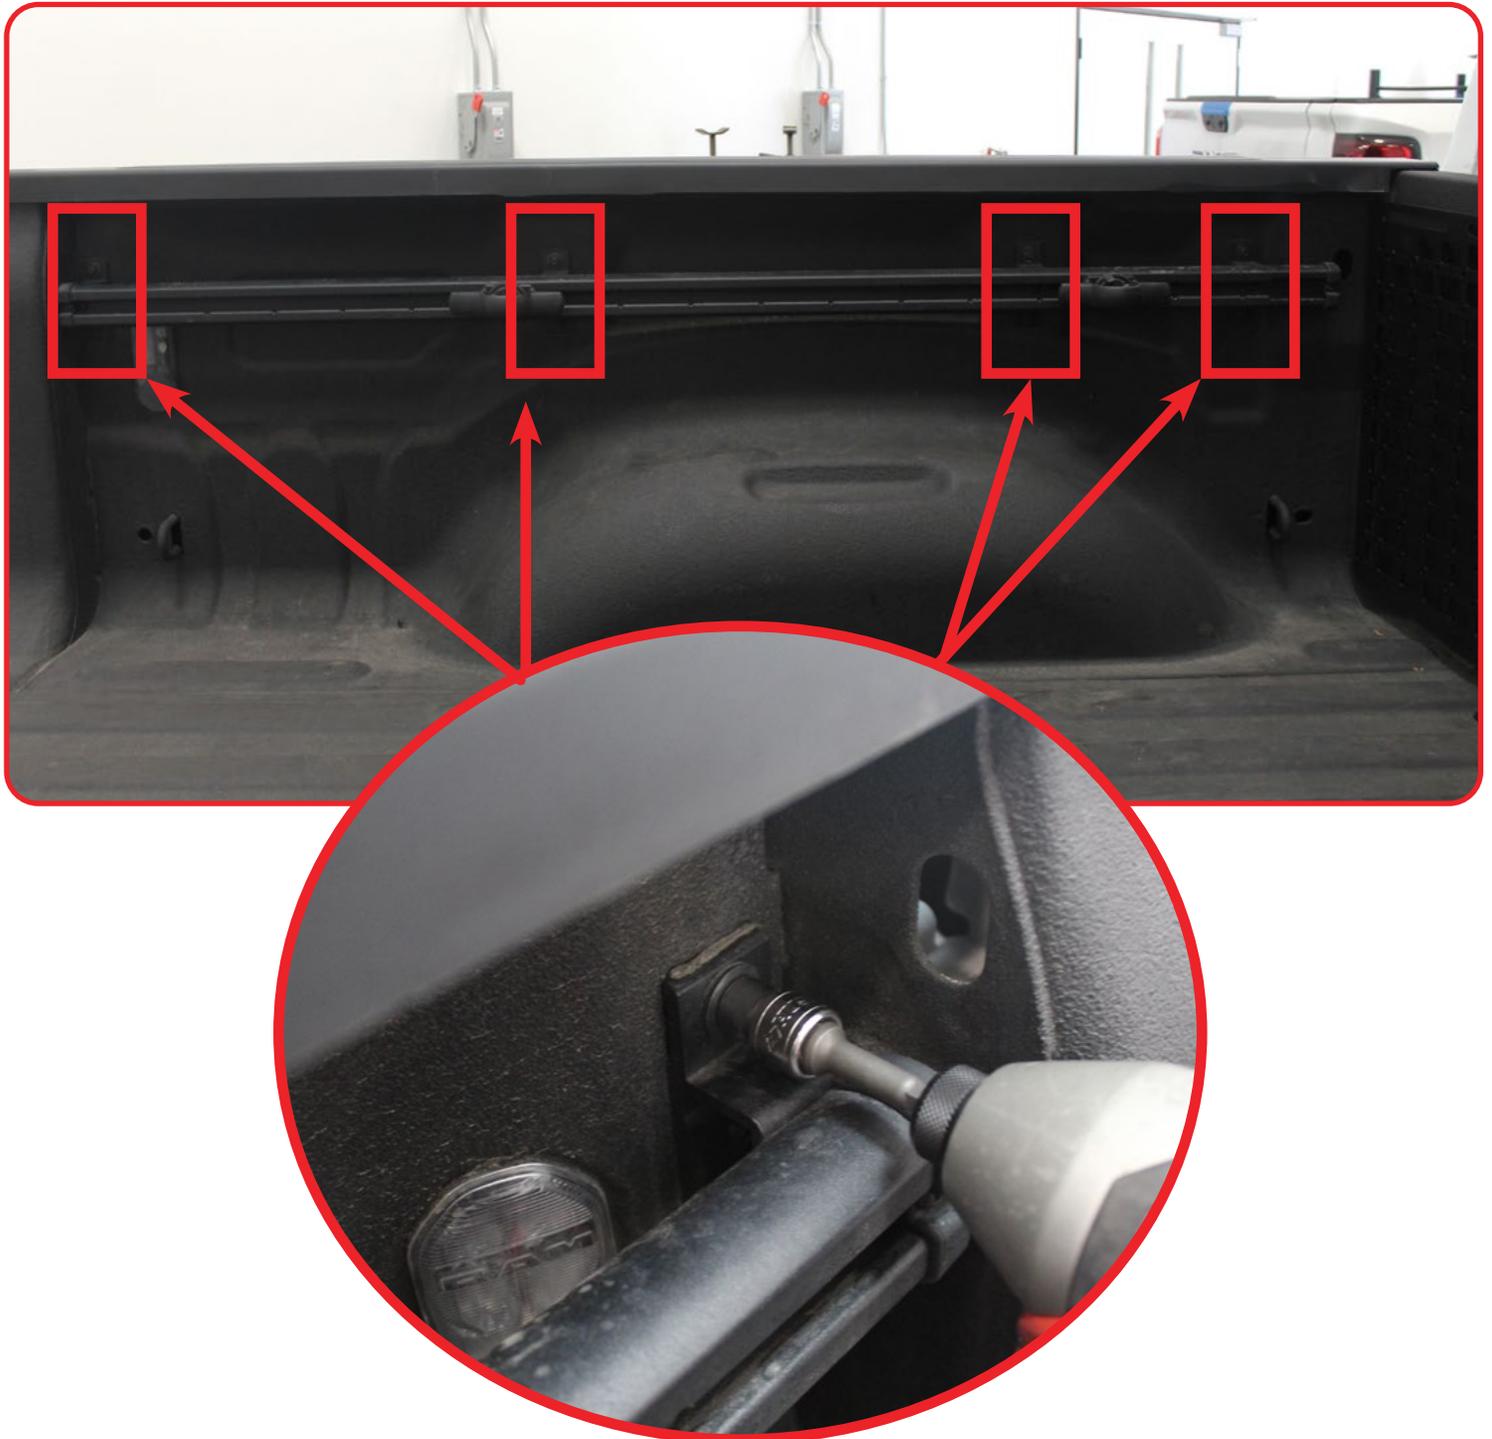




INSTALLATION GUIDE

BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

STEP 2

Install the provided mounting brackets using the hardware removed from step 1.

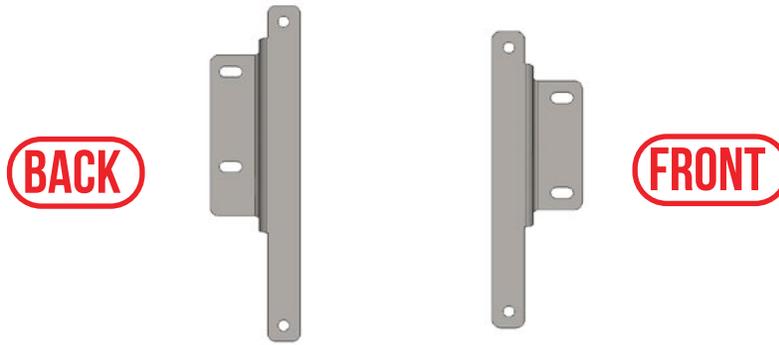




INSTALLATION GUIDE

BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

□ STEP 3

Using a (5/32 allen) install the Driver Rear, Driver Center, and Driver Front molle panels with the provided (A, A1) 1/4-20 x 3/4 button head bolts, and washers.

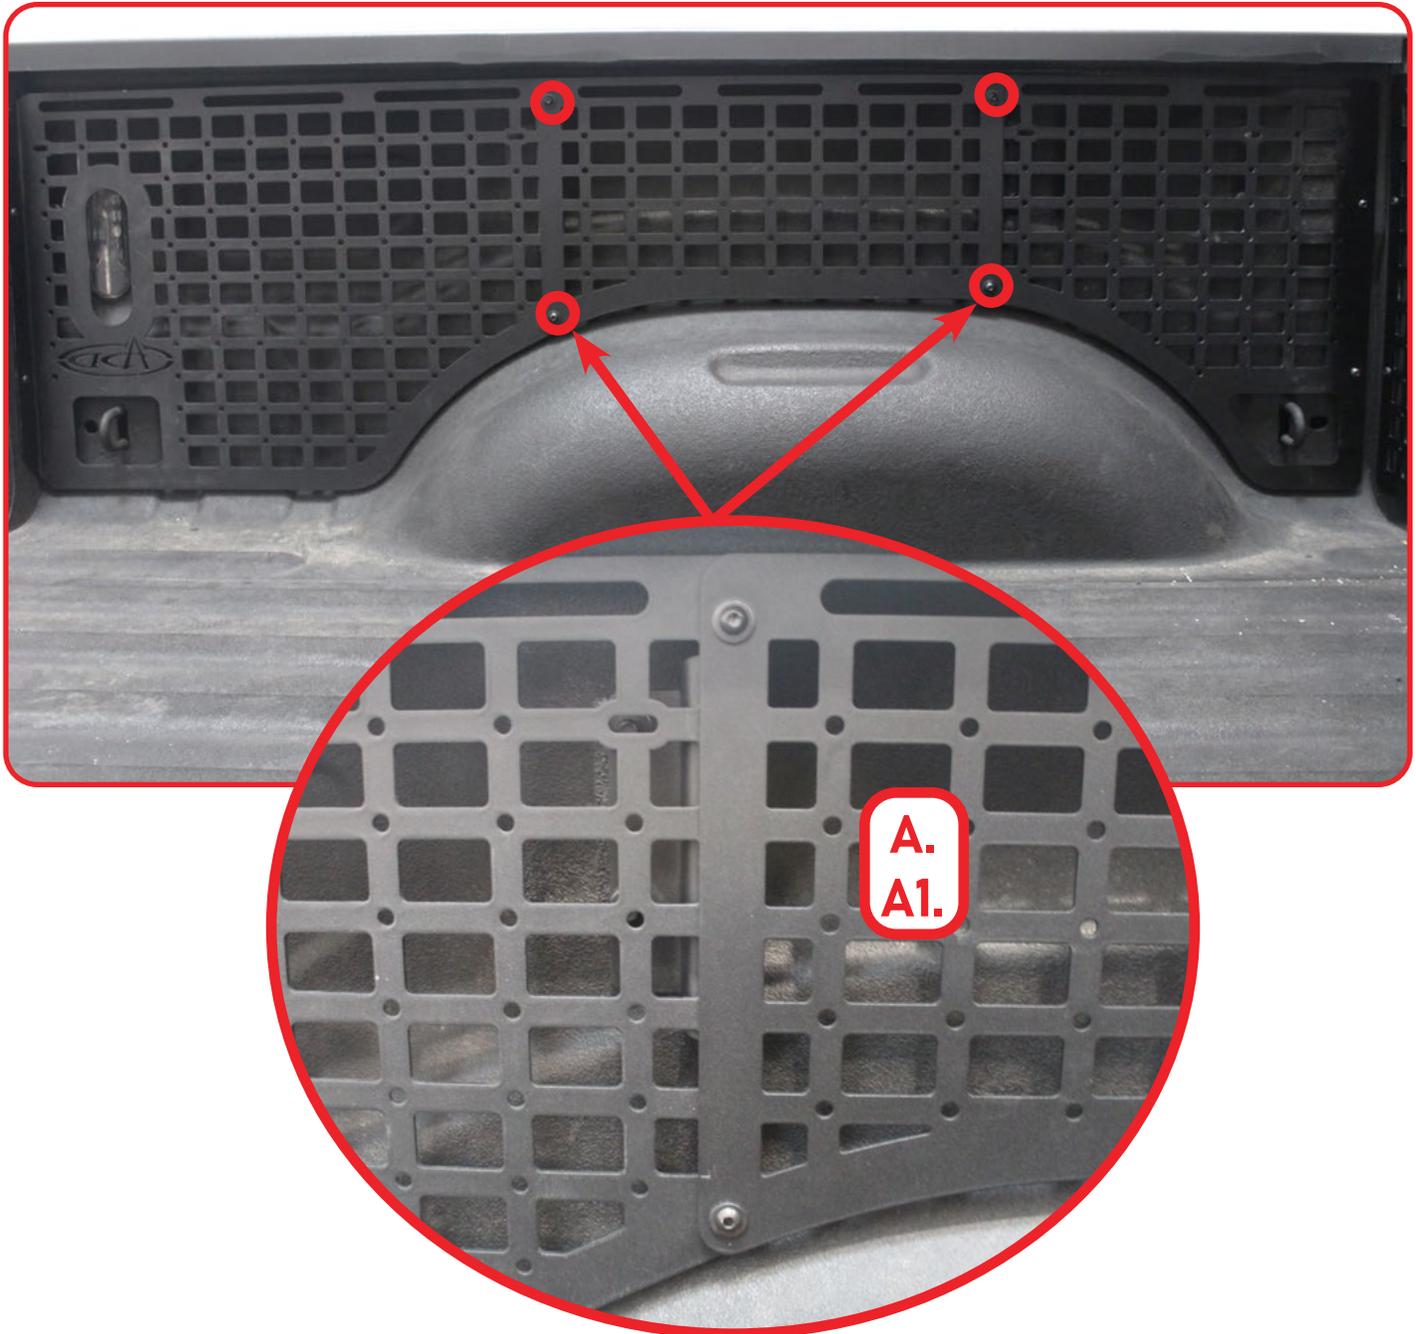




INSTALLATION GUIDE

BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

STEP 4

Mark the driver front mounting holes.

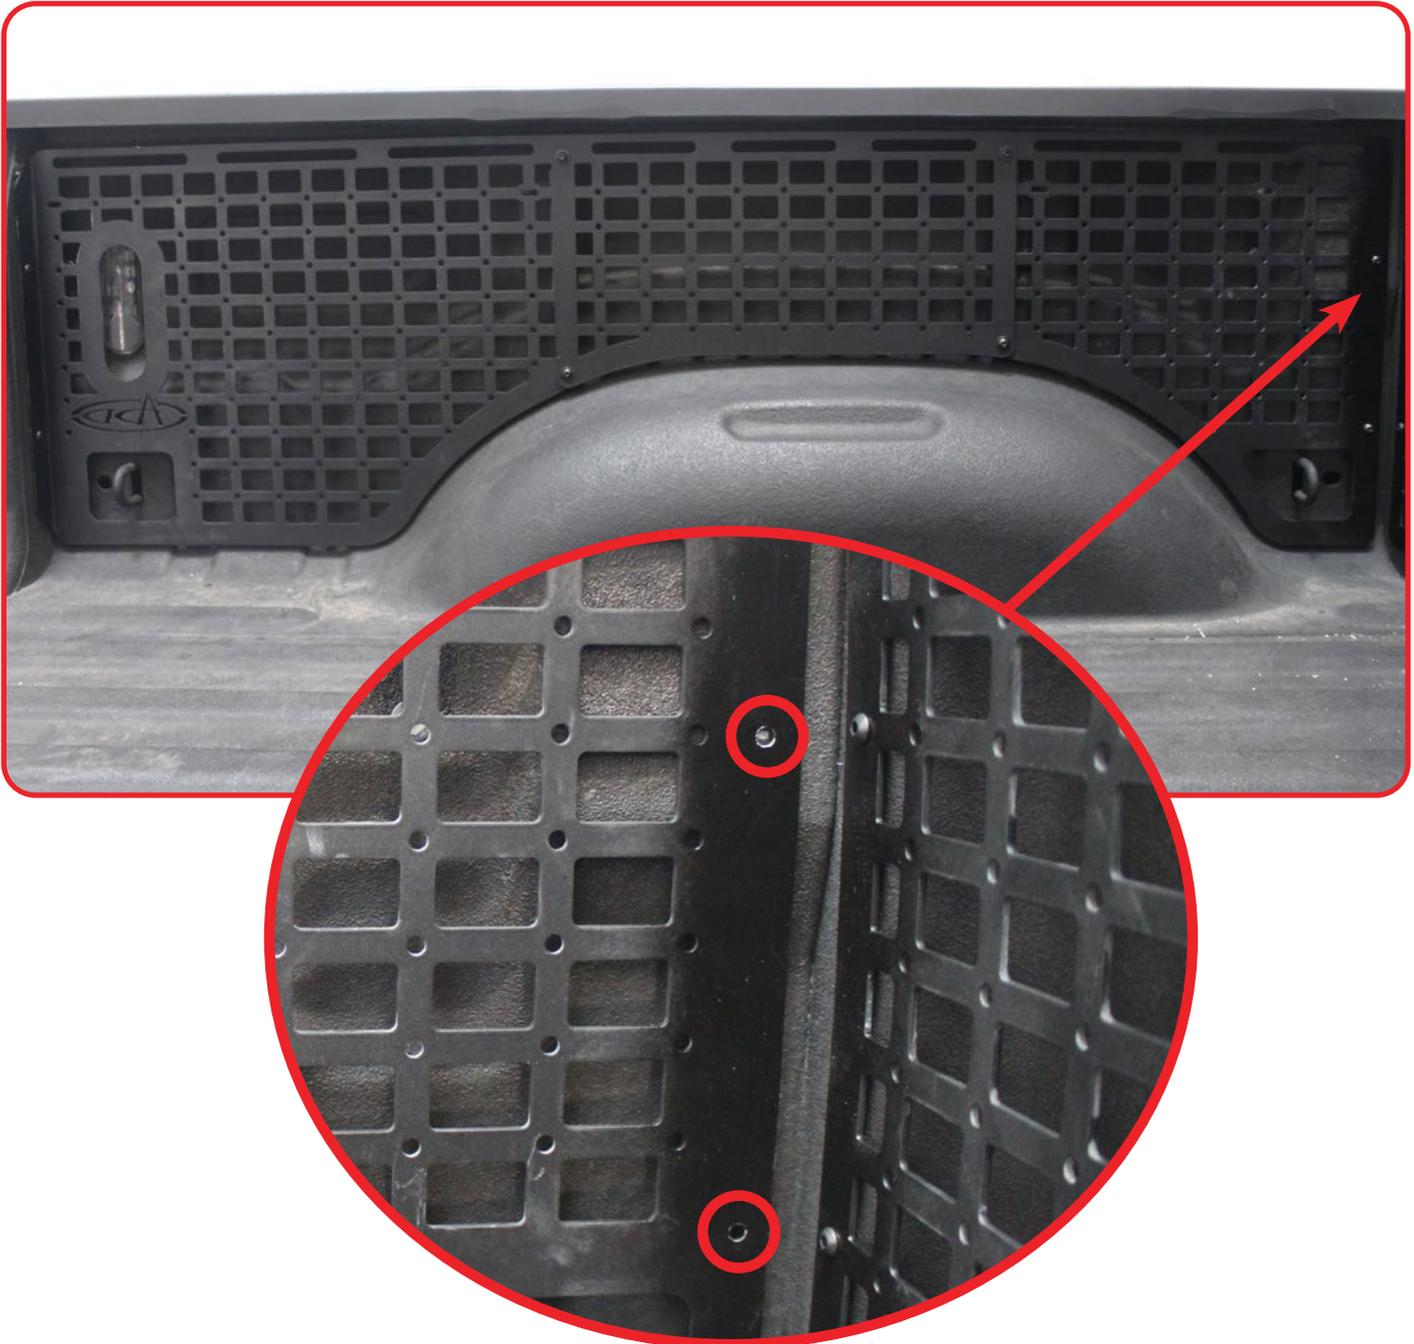



INSTALLATION GUIDE

BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

STEP 5

Mark the Driver Rear mounting holes.







INSTALLATION GUIDE

BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

STEP 6

Mark the Driver Rear mounting hole located near the wheel well as shown below.

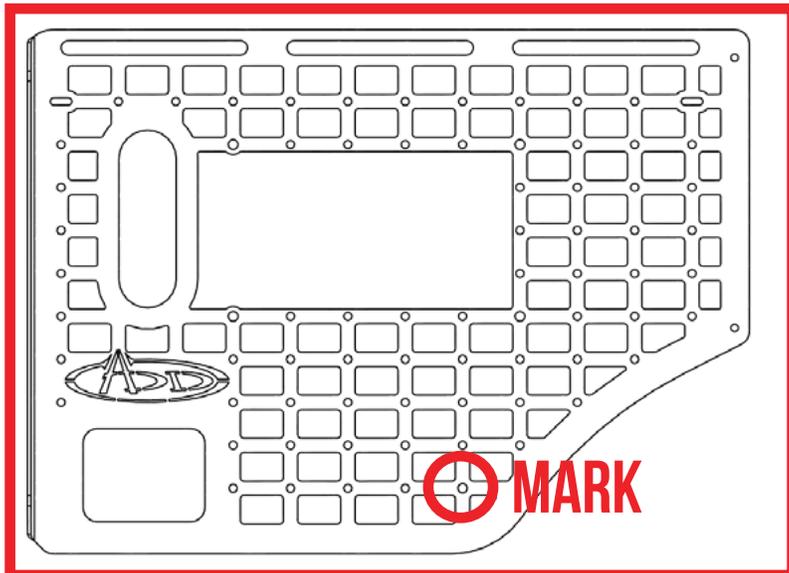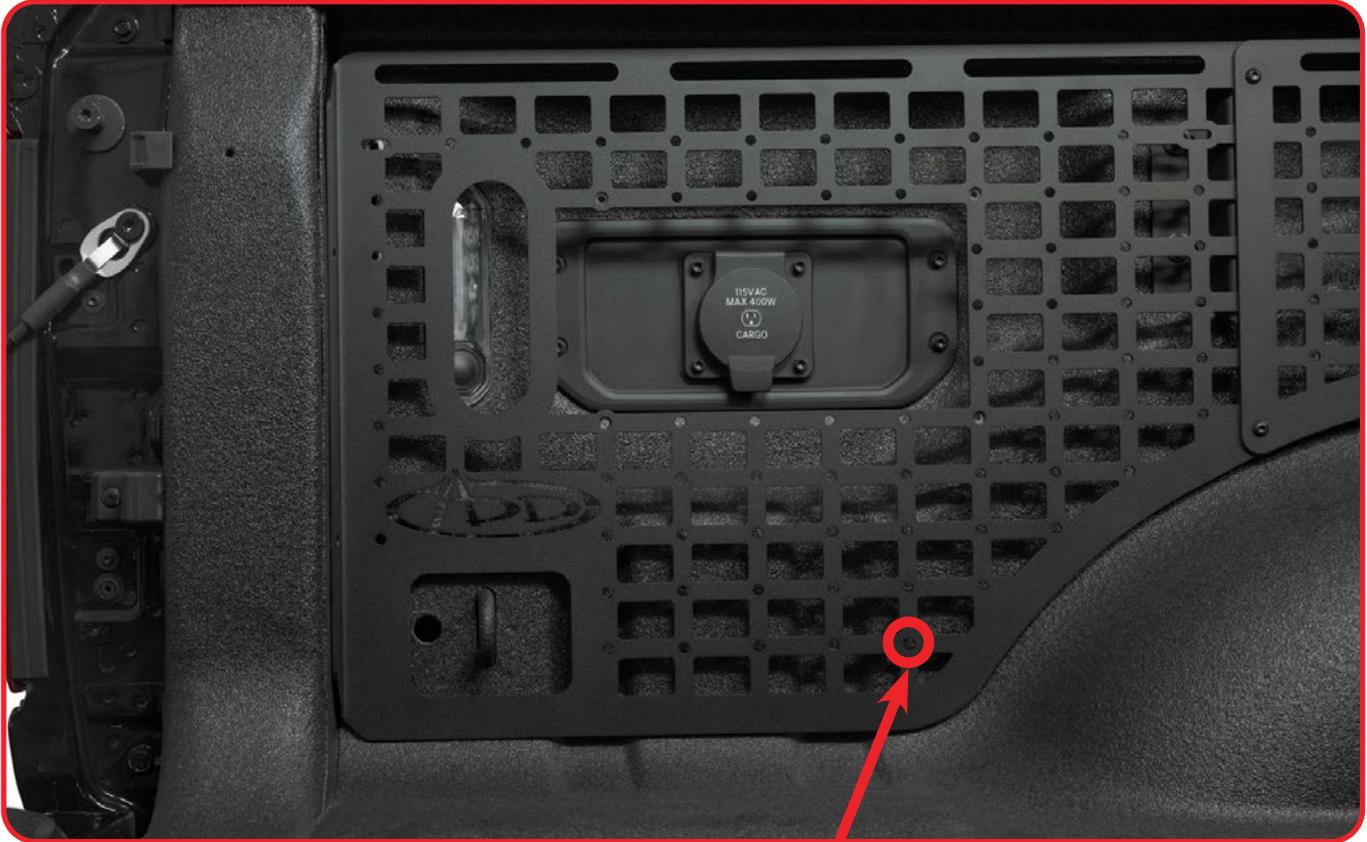



INSTALLATION GUIDE

BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

□ STEP 8


Using a (rivet nut tool) install the provided (D) 1/4-20 rivet nuts in the holes drill in step 7.



TECH TIP

If you do not have a rivet nut tool, use a 1/4-20 x 3/4 hex head bolt, a 1/4 washer, and a 3/8 nut to install the rivet nuts. Tighten using a (9/16 wrench) and a (7/16 socket) on a impact.

****HARDWARE NOT INCLUDED****

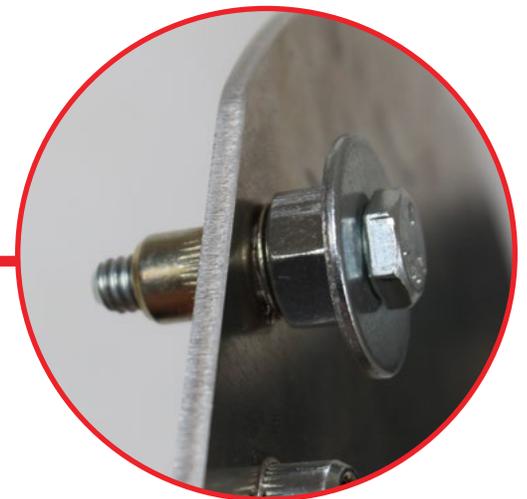




BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

□ STEP 9

Before re-install, use the provided (A1, A3, B, C) 1/4-20 X 1" button head bolt, 1/4" washer, 1/4" spacer, and the 1/4" push nut. Install on the **back side** of the Driver Rear Molle Panel as shown below.

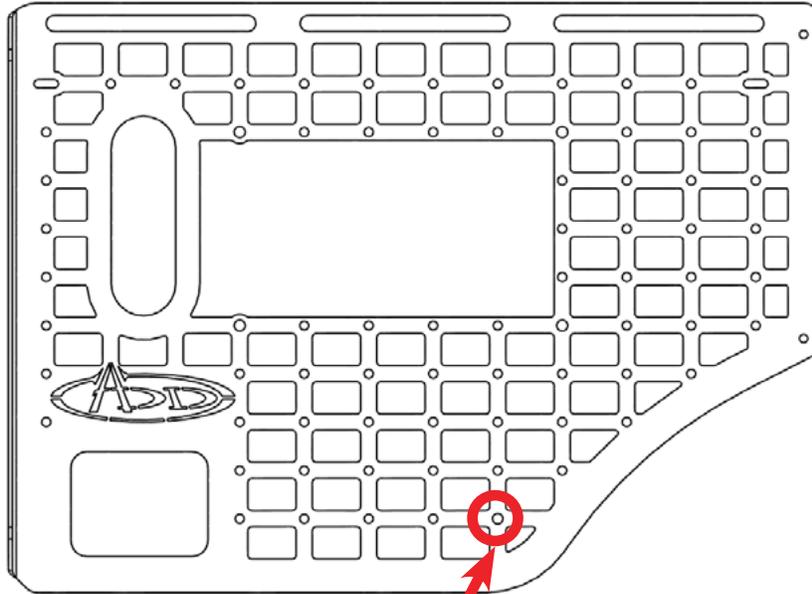


BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

□ STEP 10

- Re-Install the Driver side molle panel by repeating **step 2**.
- Using a (5/32 allen), tighten down the **(A)** 1/4-20 X 3/4" button head bolt located on the Driver Rear Molle.

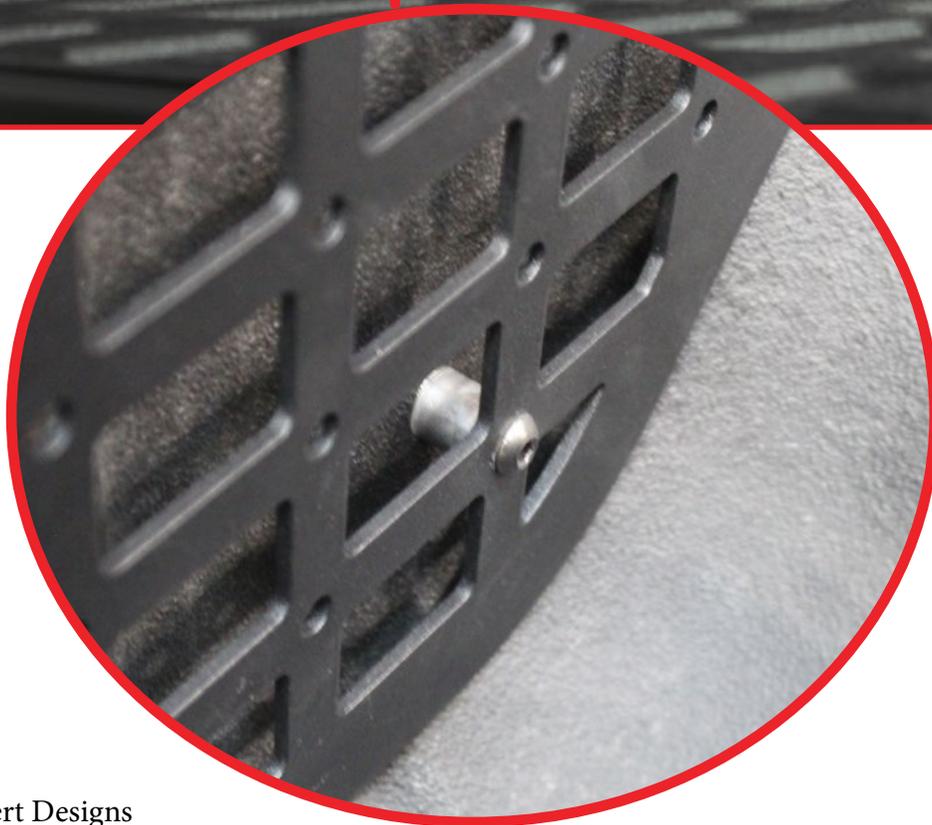




INSTALLATION GUIDE

BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

□ STEP 11

Using a (5/32 allen), install the provided (A, A1) 1/4-20 X 3/4" button head bolts, and washers located on the Driver Rear Molle as shown below.

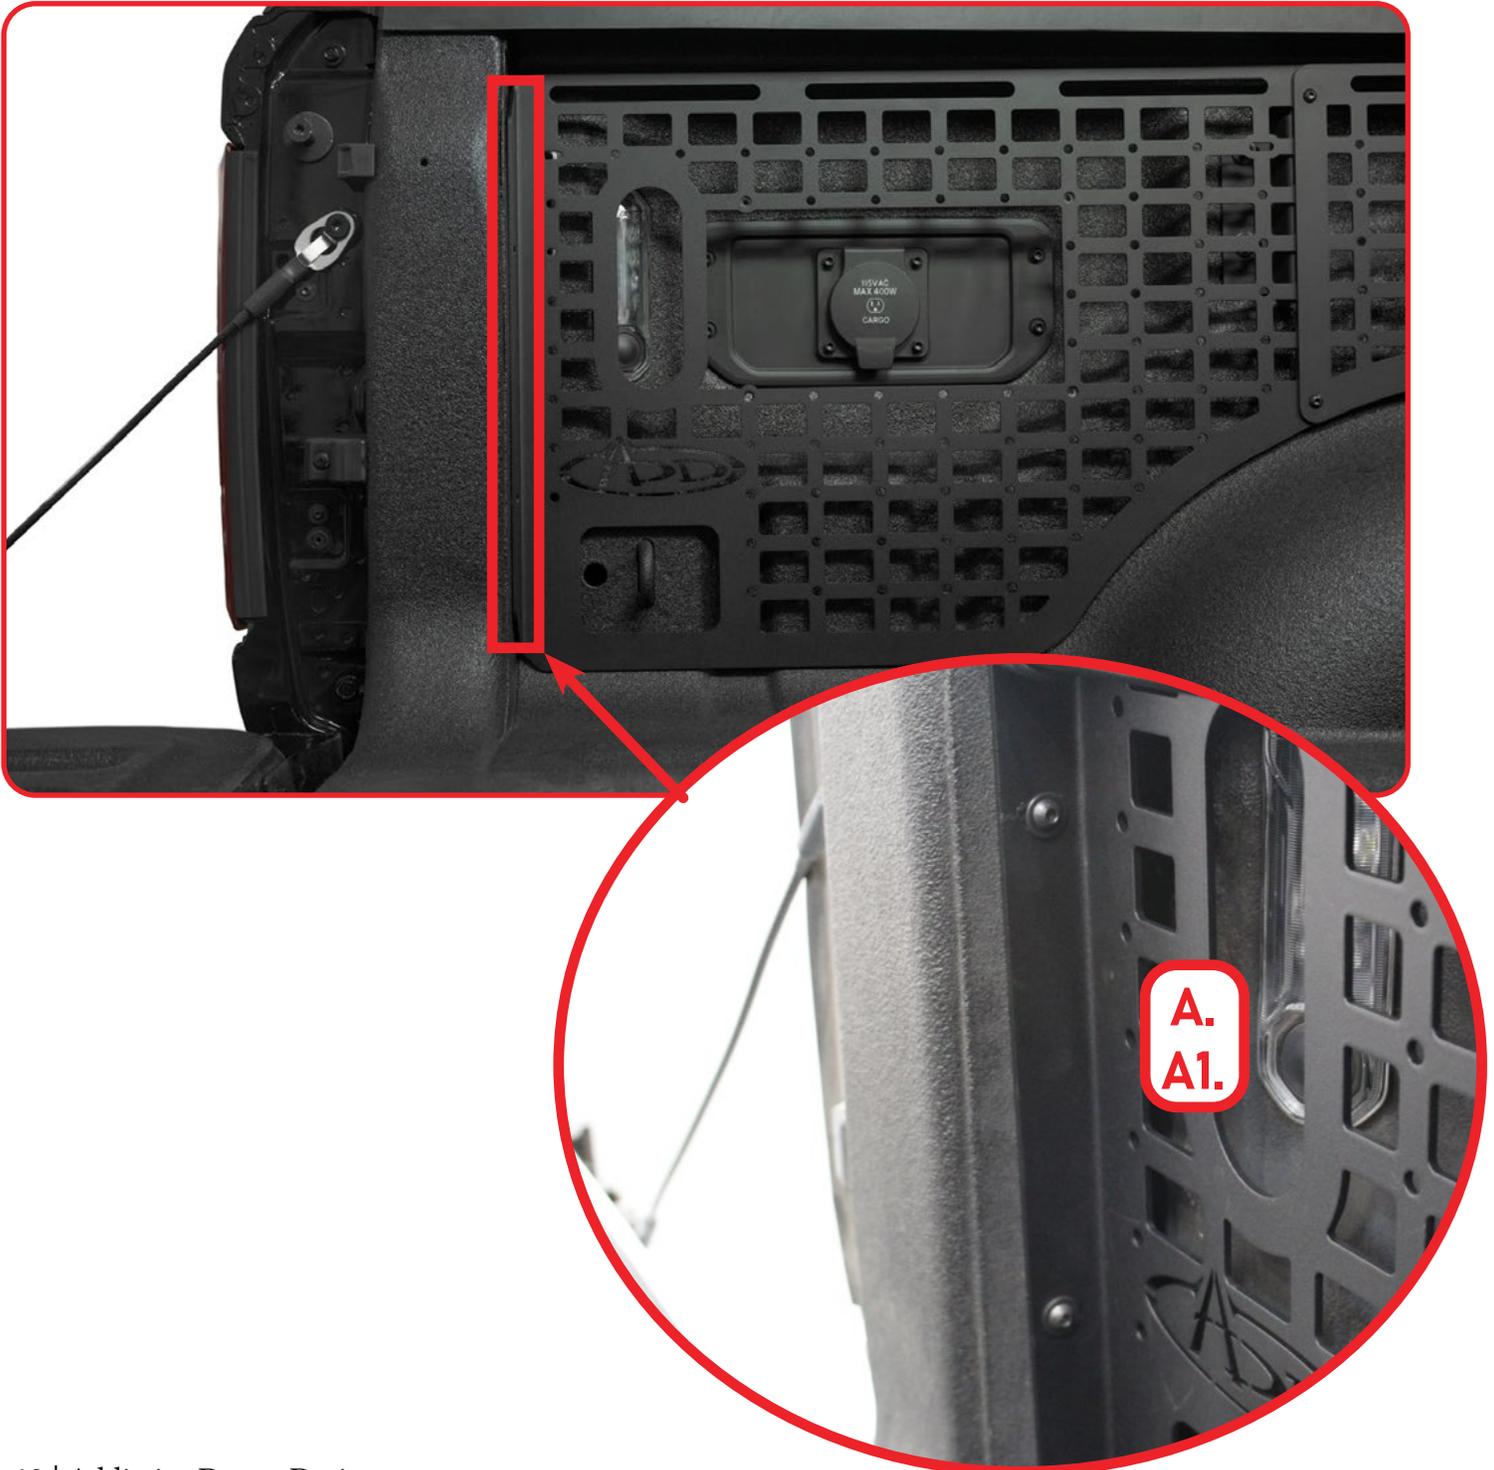




INSTALLATION GUIDE

BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

□ STEP 12

Using a (5/32 allen), install the provided (A, A1) 1/4-20 X 3/4" button head bolts, and washers located on the Driver Front Molle as shown below.

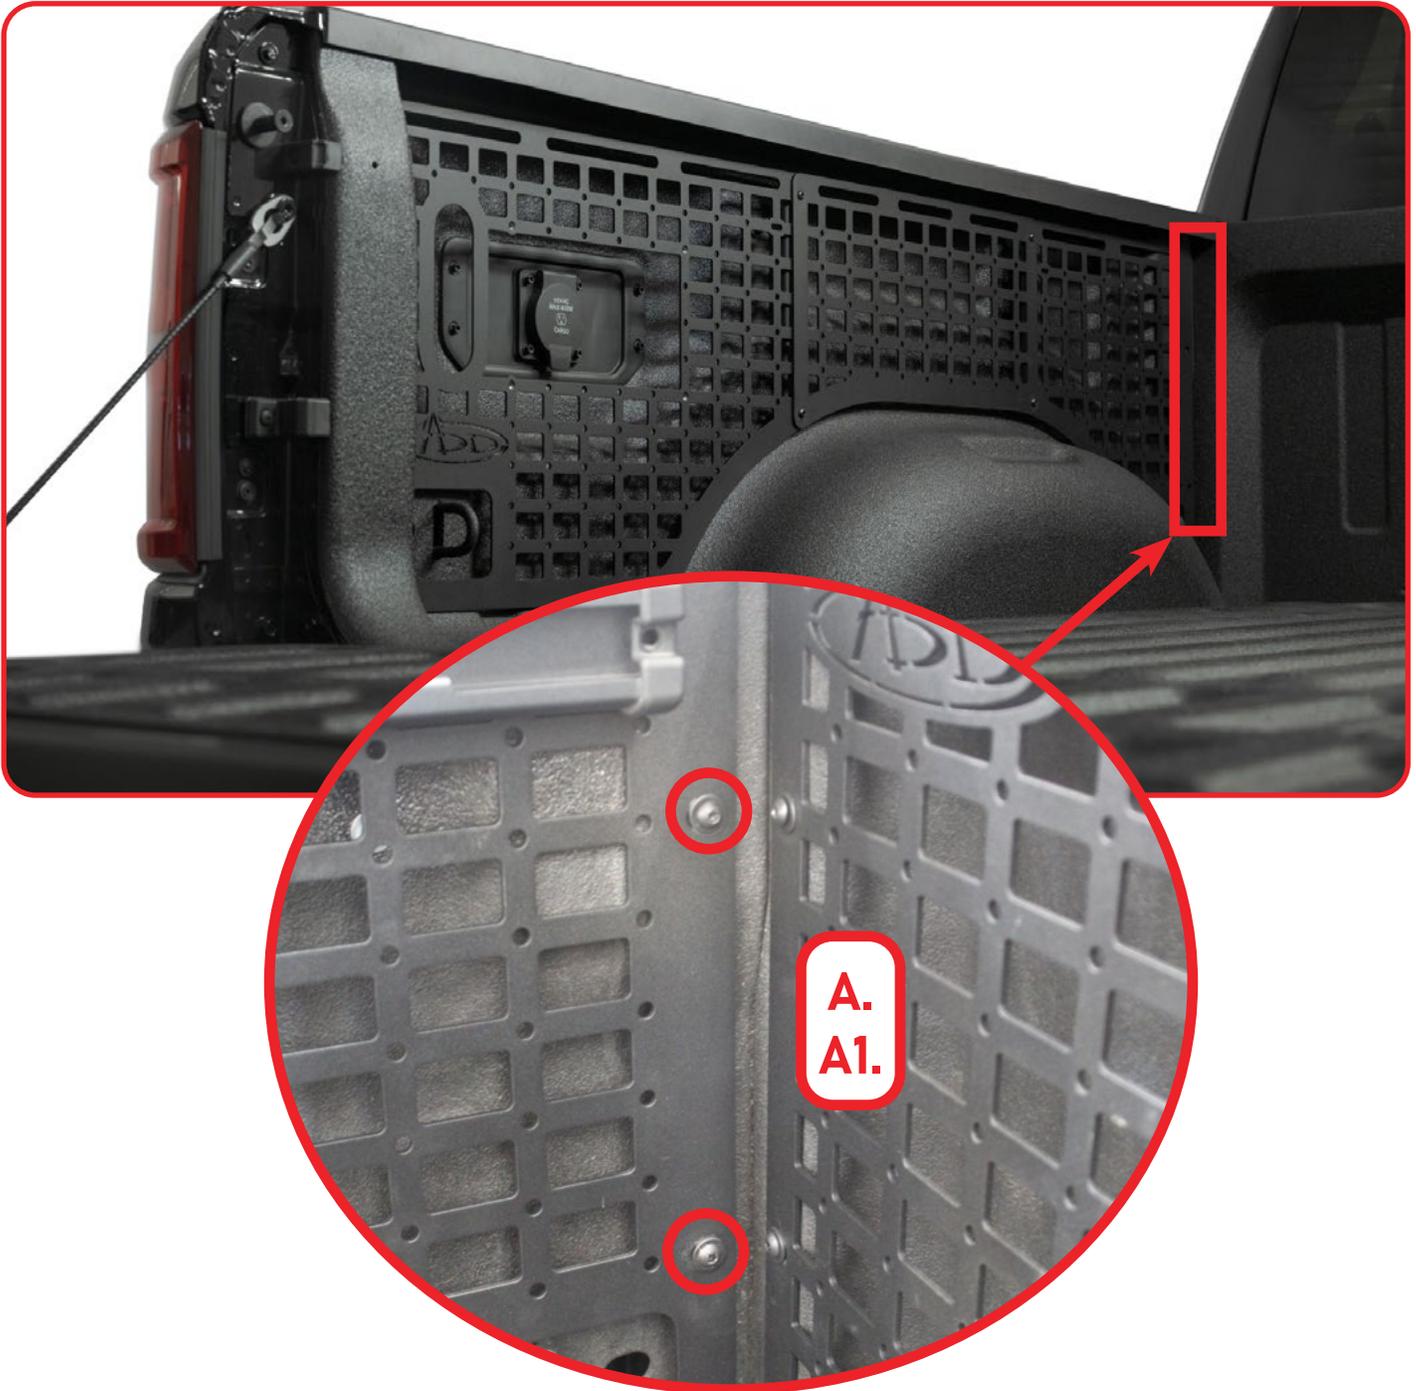


BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

□ STEP 13

Install the cover as shown below with the provided (E, E1) 1/4 hardware and M6 washer using a (5/32 allen).

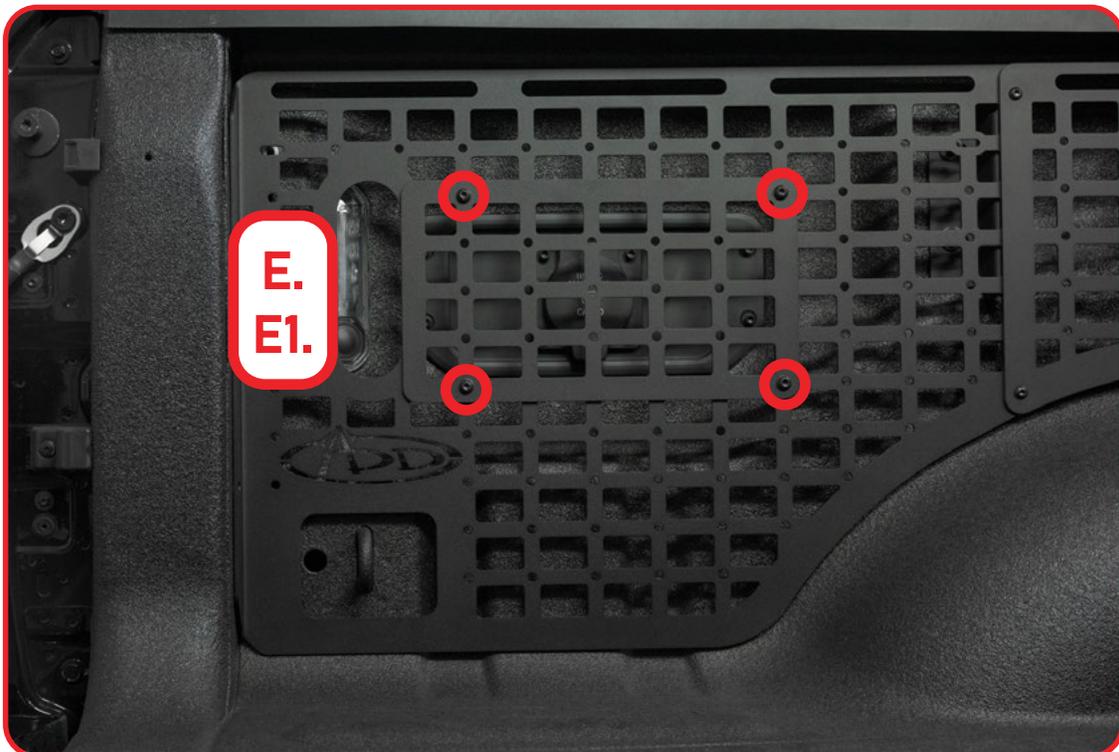



INSTALLATION GUIDE

BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

INSTALL

STEP 14

(Optional step) With a (5/32 allen) and (7/16 wrench) use the provided (A, A1, A2) hardware to install the tie down hook in the provided holes located on the top section of the Bed Side Molle as shown below.



A.
A1.
A2.



INSTALLATION GUIDE

BED SIDE MOLLE DRIVER 2025-UP/RAM RHO

FINAL

STEP 15

Stand back and enjoy your new ADD Bed Side Molle.

Check and re-tighten all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS
WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,
PLEASE CALL 480-671-0820 OR
EMAIL INFO@ADDICTIVEDESERTDESIGNS.COM